

Repair Manual

Table of Contents

Instructions for Use

- 5 ----- Notes
- 6 ----- Repair Precautions
- 8 ----- ESD (Electrostatic Discharge) Precautions
- 8 ----- OTA Upgrade
- 9 ----- Icon Description

Materials and List

- 10 ----- Materials (All)
- 11 ----- Materials (Required for this disassembly and assembly)
- 12 ----- List

Tool Preparation

- 14 ----- Tools
- 19 ----- Consumables (adhesives and other materials)

Disassembly

- 20 ----- Remove the SIM Card Tray
- 21 ----- Heating up the Phone
- 24 ----- Remove the Battery Cover Assy
- 26 ----- Remove the Middle Frame Assy
- 27 ----- Disconnect the Cables
- 28 ----- Remove the Camera Assy
- 29 ----- Disconnect the Coaxial Cable
- 29 ----- Remove the Mainboard Assy
- 30 ----- Remove the Receiver
- 30 ----- Remove the FPC Assy-Side Key
- 31 ----- Remove the Sub-Board Assy
- 32 ----- Remove the Vibrator
- 33 ----- Remove the Battery
- 33 ----- Remove the Main FPC Assy
- 34 ----- Remove the Coaxial Cable

Assembly

- 35 ----- Assemble the Vibrator
- 35 ----- Assemble the Sub-Board Assy
- 36 ----- Assemble the Coaxial Cable
- 36 ----- Assemble the Speaker Assy
- 37 ----- Assemble the Main FPC Assy
- 37 ----- Assemble the Receiver
- 38 ----- Assemble the FPC Assy-Side Key
- 38 ----- Assemble the Mainboard Assy
- 39 ----- Assemble the Camera Assy
- 41 ----- Connect the Main FPC Assy

Table of Contents

42 -----	Assemble the Battery
45 -----	Assemble the Middle Frame Assy
47 -----	Assemble the Battery Cover Assy
49 -----	Assemble the SIM Card Tray
50 -----	Crimp Mobile Phone
51 -----	Test Phone Functions

Calibration and Quality Inspection

52 -----	Calibration
52 -----	Quality Inspection

Notes

All functions, features, specifications and other device information provided in this document, including but not limited to the device's advantages, design, price, components, performance, availability and functionality, are subject to subsequent changes without further notice. Xiaomi reserves the right to modify this document or the device described herein at any time without obligation to provide notice of such changes.

Repair Precautions

Xiaomi is not responsible for any damage or defects caused by repairs by unauthorized service providers, self-repairs, or repairs by non-professionals. Xiaomi is not responsible for damage to the device, personal injury, or other device safety issues caused by attempts to repair the device without following these repair and maintenance instructions.

Damage or defects caused by attempts to repair the device by anyone other than a Xiaomi-certified service provider are not covered by the warranty.

- Because most electronic components are sensitive to electromagnetic forces, use a demagnetizing tool designed for minor electronic repairs.
- When repairing the device, use a high-quality screwdriver. Avoid damaging the screw heads with inferior screwdrivers.
- Always use OEM (Original Equipment Manufacturer) replacement parts. Using third-party replacement parts may not work properly and may cause fire or personal injury.
- Certain parts, such as sensors (laser autofocus/proximity/fingerprint sensors), rear cameras, TSP (touch screen), speakers, and other components, may require calibration to guarantee their performance after repair.
- If your device is waterproof and dustproof, its waterproof and dustproof performance is not guaranteed if it is repaired by you or other non-professional workers.
- If you need to access the device's fault data or require a more detailed diagnosis, please visit a Xiaomi Service Center.
- If you need to replace an unsold part, please visit the Xiaomi Service Center and get further guidance.
- Before repairing, be sure to back up all important data stored in the device to avoid data loss.

Instructions for Use

Before performing repairs, be sure to wear appropriate safety equipment.

Xiaomi is not responsible for any injuries that may occur as a result of not wearing appropriate safety equipment. Please read the Disassembly and Assembly Tools carefully, understand the list of tools required to assemble and disassemble the device.

- Always repair the device in a safe place.
- Before repairing the device, make sure the device is turned off.
- If the device If the device is damaged, emits smoke, or if you smell something burning, stop using the device immediately and contact Xiaomi.
- It is recommended to wear safety equipment such as glasses, gloves, and masks when repairing the device.
- When removing the back cover, be careful not to damage the device.
- Before assembly, make sure there are no screws or foreign objects around the battery.
- During assembly, check for any abnormalities before reinstalling the back cover, and be careful not to hit or damage the battery. If the battery is damaged, please go to a Xiaomi Service Center.
- Do not heat the device directly in a microwave.
- Before repairing the device, make sure the battery is fully discharged.
- You can visit (<https://spare-parts.mi.com/>) to view device information, related materials and safety information.

ESD (Electrostatic Discharge) Precautions






Electrostatic discharge is the sudden flow of electricity between two charged objects due to contact, short circuit, or dielectric breakdown. ESD can negatively affect mobile devices, especially electronic components.

- It is recommended to use ESD-safe (antistatic) equipment, such as antistatic wrist straps and gloves, and ESD-safe mats when repairing devices.
- Increase airflow in the work area to reduce the possibility of accidental electrostatic discharge, which may increase in low humidity environments (such as air-conditioned rooms).

OTA Upgrade


You can check system updates by clicking on the system version number in the phone settings. If the system needs to be upgraded, you can click on the details to view the update log to understand the details of the upgrade and decide whether to update the system version based on your actual situation.

Icon Description


-  **Warning:** Situations that could cause harm to yourself or others;
-  **Caution:** Situations that may cause damage to your device or other equipment;
-  **Tip:** Notes, usage tips, or other information;
-  **Customers:** If you are the customer, please refer to the precautions/operations under this icon;
-  **Professional authorized repairer:** If you are the professional authorized repairer, please refer to the precautions/operations under this icon.

Materials and List

Materials (All)

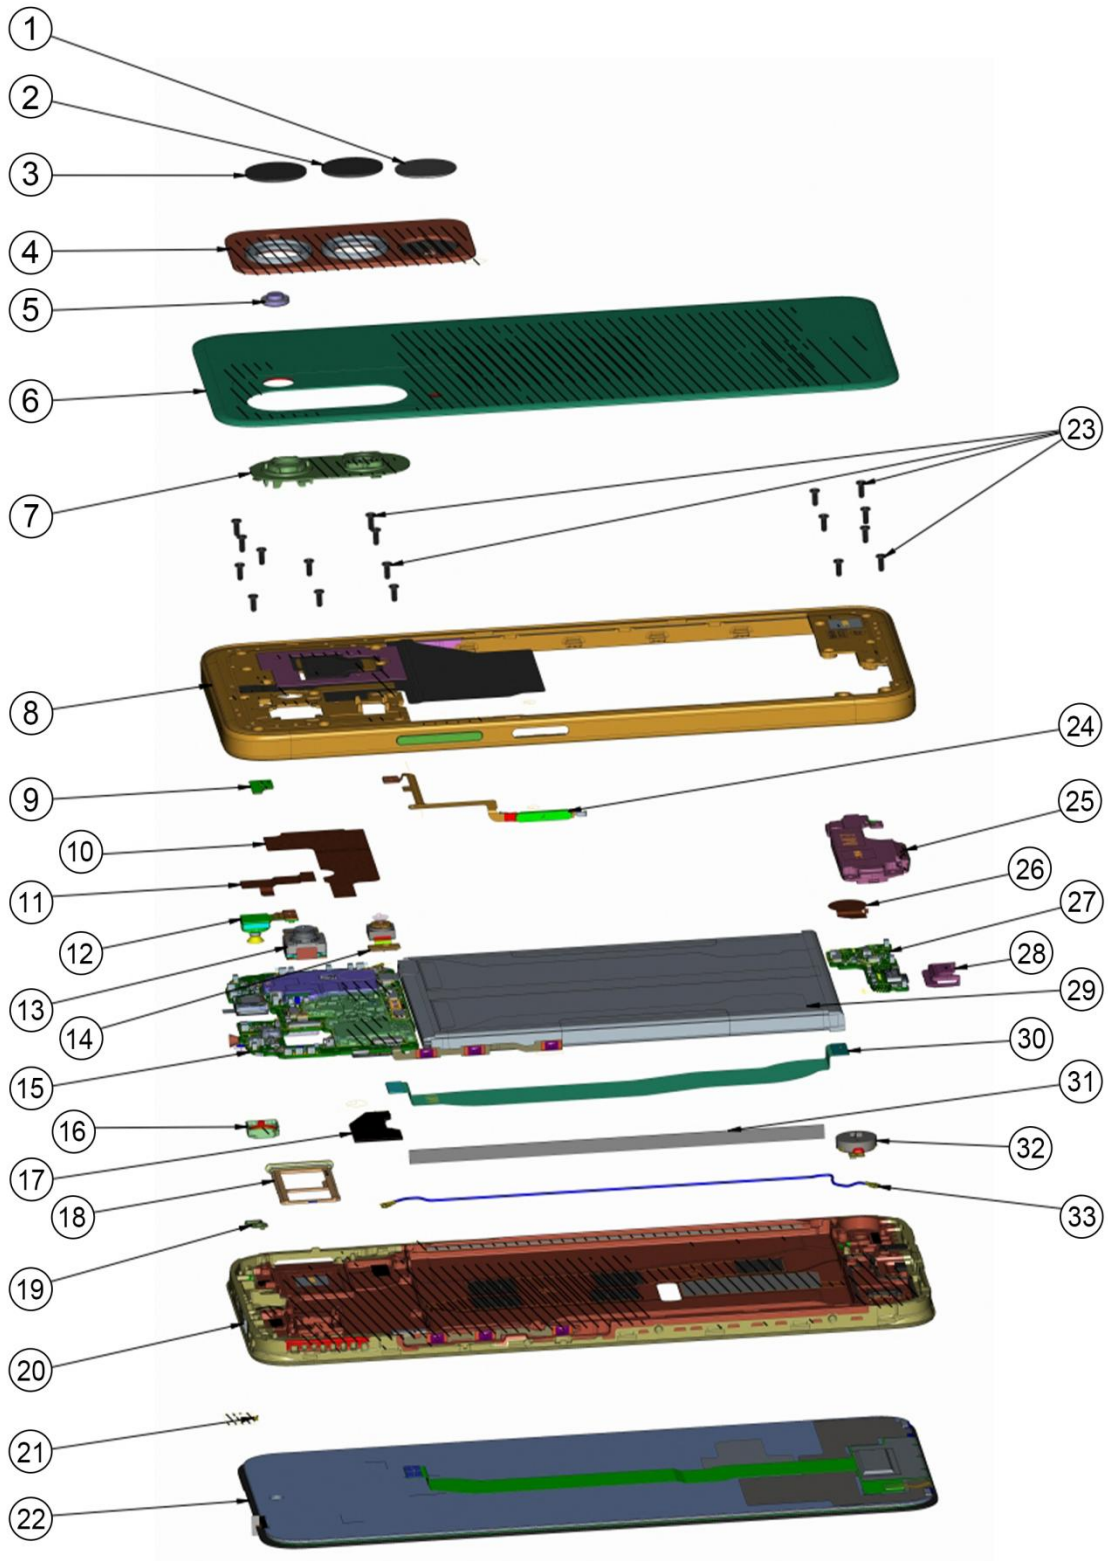

Materials (Required for this disassembly and assembly)

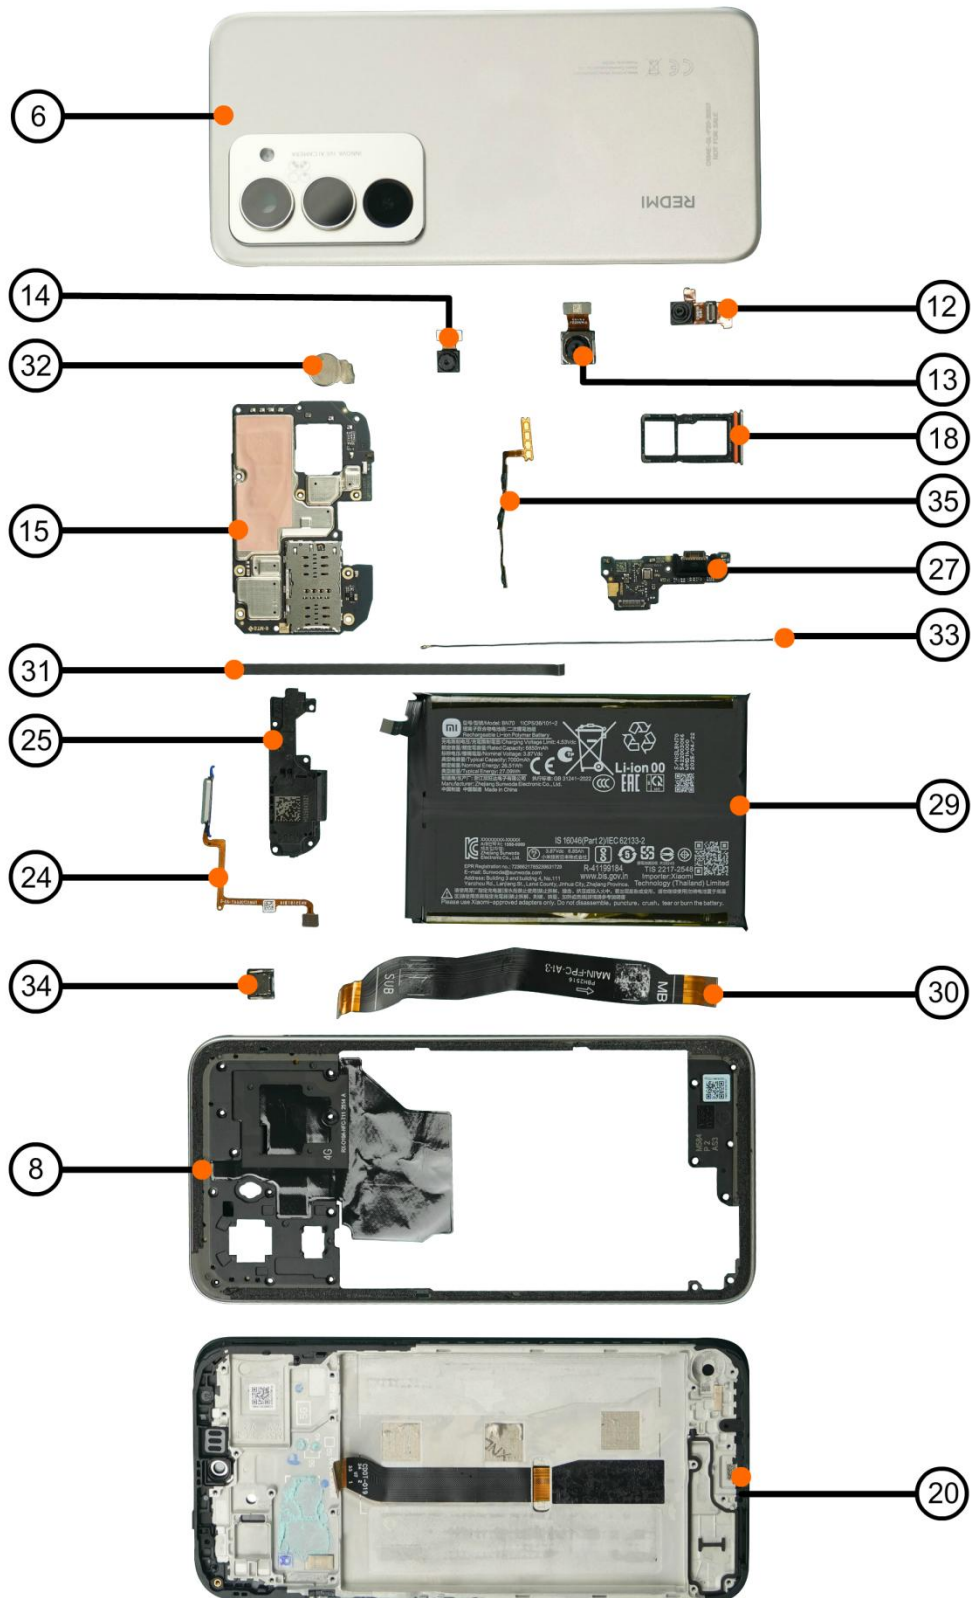

List


Serial number	Name
1	Lens-Deco Sheet
2	Lens-Rear Auxiliary Camera
3	Lens-Rear Main Camera
4	Rear Camera Hardware Deco Assy
5	Flash Light Lampshade
6	Battery Cover Assy
7	Deco Inner Frame Assy
8	Middle Frame Assy
9	Receiver Transfer FPC
10	Shield Cover Heat Dissipation Graphite Sheet
11	Radiating Copper Foil Front Camera
12	Camera-Front
13	Camera-Rear-Main
14	Camera-Rear-Macro-Depth
15	Mainboard Assy
16	Front Camera Frame
17	DDR&CPU support silicone pad
18	SIM Card Tray
19	Rubber-Light Sensor
20	Front Cover Assy
21	Light Sensor-TP
22	TP Module
23	Screw
24	Fingerprint Module
25	Speaker Assy
26	Conductive Cloth-Motor













Materials and List

Serial number	Name
27	Sub-Board Assy
28	Rubber-USB
29	Battery
30	Main FPC Assy
31	Coaxial Cable Tray Blocking Foam
32	Vibrator
33	Coaxial Cable
34	Receiver
35	FPC Assy-Side Key

















Tools and Materials

Tools










 When disassembling and assembling the phone, please wear protective equipment to prevent injury.

Tool Name	Diagram	Details	Target users
Safety Goggles		Prevent accidents during repair (protective equipment).	 
Safety Gloves (ESD safe, cut-resistant)		Prevent accidents during repair (protective equipment).	 
Safety Mask		Prevent accidents during repair (protective equipment).	 
Anti-static Wrist Strap		Prevent static electricity from damaging the device (recommended).	 

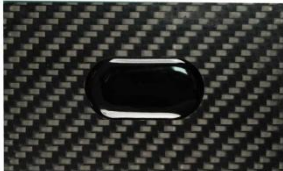


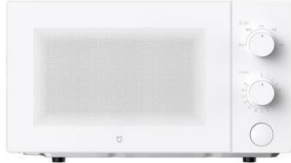



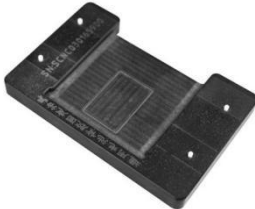

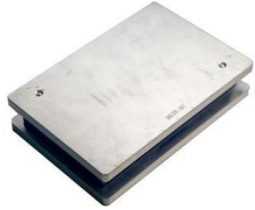

Tool Preparation

Tool Name	Diagram	Details	Target users
ESD Safe Mat		Prevent static electricity from damaging the device (recommended).	 
Ejection Pin		Used to remove the SIM card tray (necessary tool).	 
Phillips Screwdriver		Used to remove screws (necessary tool).	 
Plastic Pry Bar		For removing wiring harness connections and other components (necessary tool).	 
Suction Cup		Used for disassembling and assembling the back cover and screen (necessary tool);  If your display is cracked, the suction cup may not stick properly and be careful not to get cut by the broken pieces.	 








Tool Preparation

Tool Name	Diagram	Details	Target users
ESD Safe Tweezers		<p>Used for disassembly and assembly of small parts (necessary tool);</p> <p> Please do not use metal tweezers to avoid scratching the device and damaging it with static electricity.</p>	 
Plastic Pry Tool		<p>Used to remove the battery cover and other parts (necessary tool);</p> <p> Other sturdy sheets can be used instead (plastic sheets);</p> <p> Please do not use metal sheets or blades to avoid damaging the device.</p>	 


Tool Preparation




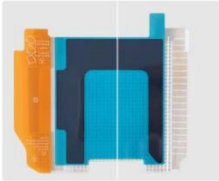





Tool Name	Diagram	Details	Target users
Heating Bag		Used to heat when removing the back cover (necessary tool);  Use the tabs as handles when heating to avoid burns.	
Micro-wave Oven		For heating the Heating Bag (necessary tool).	
Adhesive Backing Fixing Tool		Used to position the adhesive when sticking the battery cover.	
Battery Adhesive Applicator		Used to position the battery glue when sticking it.	
Battery Cover Assembly Press Device		Used when pressing the battery cover to evenly distribute the pressure on the battery cover.	

Tool Preparation

Tool Name	Diagram	Details	Target users
Heating Platform		When removing the battery cover, heat the adhesive on the battery cover to make it easier to separate the battery cover from the device.	
Crimping Tool		Used when pressing the battery cover, so that the pressure can be precisely controlled.	
Air Tightness Tester		Used to detect the air tightness of mobile phones;  If the phone is dustproof and waterproof, the air tightness of the phone needs to be tested after assembly.	

Consumables (adhesives and other materials)

-  Consumables may vary depending on the repair parts, country, region or repair provider.
The content in the table is for reference only.

Name	Diagram	Details	Target users
Battery Cover Adhesive		Used when attaching the battery cover to the device.	 
Easy Release Adhesive-Battery		Used when attaching the battery to the device.	 
Front Cover Display Module		Used when replacing the screen.	 


Disassembly


Before disassembly


- Make sure your phone data is backed up to prevent loss of important data.
- Disconnect the device from the power source and turn it off.
- Wear an anti-static wrist strap and connect it to a grounded ESD safety mat.
- The composition of the product may vary by country, region, or repairer.

1. Remove the SIM Card Tray:


Insert the ejection pin into the hole of the SIM card tray to loosen the tray and pull out the tray gently from the slot.

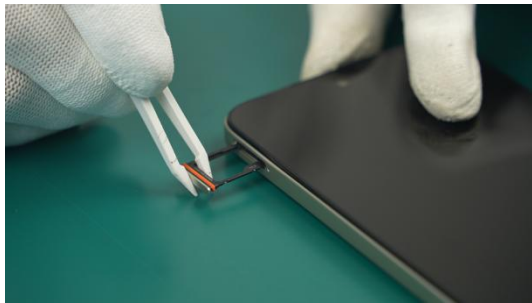



 To prevent scratching the device's surface, it is advisable to remove the SIM card tray using either your hands or plastic tweezers.

 For the assembly method of the SIM Card Tray, please refer to the subsequent assembly tutorial in the manual.


2. Heating up the Phone:

 If you are the customer, please refer to the following method:

-  • It is possible for the device or battery to be damaged by heat.
 - Do not heat the device in a microwave. Doing so could cause an explosion.
-  • Follow the heating bag's instructions for heating. The recommended time for heating the bag is 50 seconds in a 1000W microwave and 70 seconds in a 700W microwave. (Correct temperature for use: 55-65 °C.)
 - Be careful not to damage the device through excessive heat. (It is recommended to disassemble the device in an area with a temperature gauge.)

(1) Heat the Heating Bag in the microwave for 2-5 minutes until it reaches about 70 degrees Celsius.




 The heating time needs to be adjusted according to the power of your microwave.

Disassembly and Assembly

(2) Take the Heating Bag out of the microwave.



 Use the label as a handle when removing the Heating Bag to avoid burns.

(3) Place the phone on the Heating Bag and heat it for about 1-2 minutes.



Disassembly and Assembly


 If you are a professional authorized repairer, please refer to the following method:

(1) Use a heating platform and wait for it to heat up to about 70 degrees Celsius.



(2) Place the phone on the heating platform and continue heating for 1-2 minutes.



 Please heat the device within the specified temperature and time. Otherwise, it may be damaged or affect subsequent operations.

3. Remove the Battery Cover Assy:

(1) Use a Suction Cup and Plastic Pry Tool to gently cut the adhesive on the Battery Cover.



💡 Use the Plastic Pry Tool to slide along the left edge of the device to cut the glue, leaving the Plastic Pry Tool on the left edge side when finished to prevent the adhesive from resealing.

- 📁 • As the Battery Cover Assy may be damaged by excessive force, be careful not to damage the Battery Cover Assy.
- Do not insert the Plastic Pry Tool too deeply into the device, as the internal circuitry may be damaged.

Disassembly and Assembly


- (2) Use the Suction Cup and Plastic Pry Tool, as described above, cut away all the glue around the Battery Cover assembly, then carefully separate the Battery Cover assembly from the device.



- Be careful not to damage the Battery Cover Assy, as excessive force may damage it.
 - Do not insert the Plastic Pry Tool too far into the device, as it may damage the internal circuitry.
- 💡 If it's difficult to create a gap, reheat to further soften the adhesive. When reheating, do not reheat for more than 30 seconds.
- ⚠️ Anti-shattering of glass/ceramic back cover:
- Avoid pressing hard on the center of the back cover when separating (especially for curved screen models) to prevent glass cracking due to stress concentration.
 - If the back cover is broken, fix the fragments with tape before operation to avoid scratching your fingers or dropping them into the device.

4. Remove the Middle Frame Assy:

- (1) Use a needle screwdriver to remove the screws at the top and bottom.

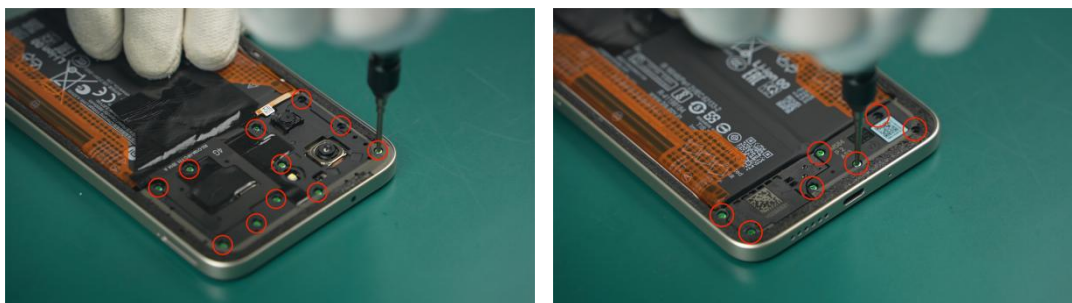


- 💡 Check the number of screws that have been removed and keep them in a safe place to ensure that no unassembled screws are left inside the device during the assembly

Disassembly and Assembly


process.

- (2) Use the Plastic pry tool to separate the Middle Frame Assy clips from the device.

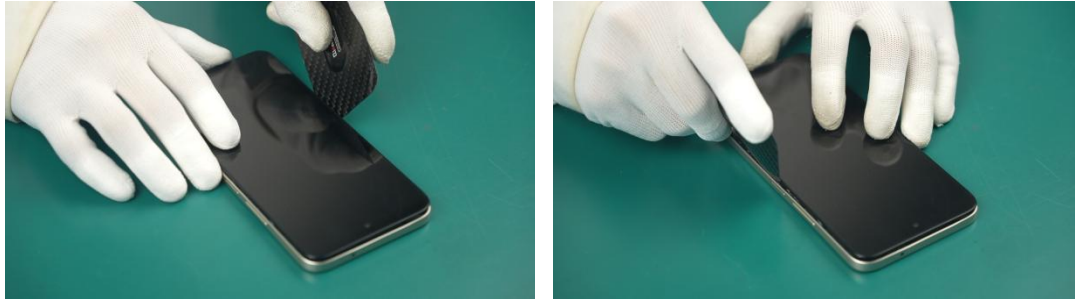

- (3) Lift the Middle Frame Assy. Disconnect the cable of the Fingerprint Module from the device, and then remove the Middle Frame Assy;




 When operating near the power button, be careful to avoid accidental touch or damage.

Disassembly and Assembly


(4) Remove the Fingerprint Module from the Middle Frame Assy.



 Do not use metal tweezers or other hard tools as they may scratch the device.


5. Disconnect the Cables:

(1) Disconnect the Battery Cables.

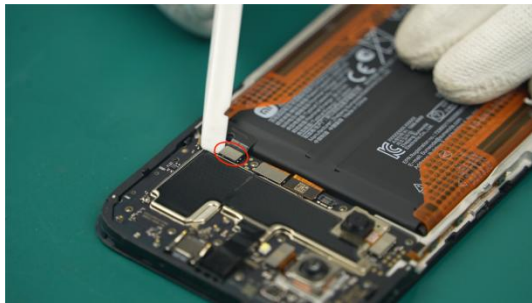


- For your safety, always disconnect the Battery Cable connector first.
- Be careful not to damage the Battery.

(2) Disconnect the Main FPC Assy and the Front Cover Display Module connected to the Mainboard Assy.

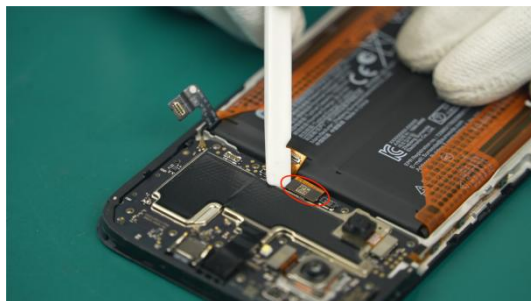


6. Remove the Camera Assy:


(1) Disconnect Camera-Rear-Main and remove it from the device.

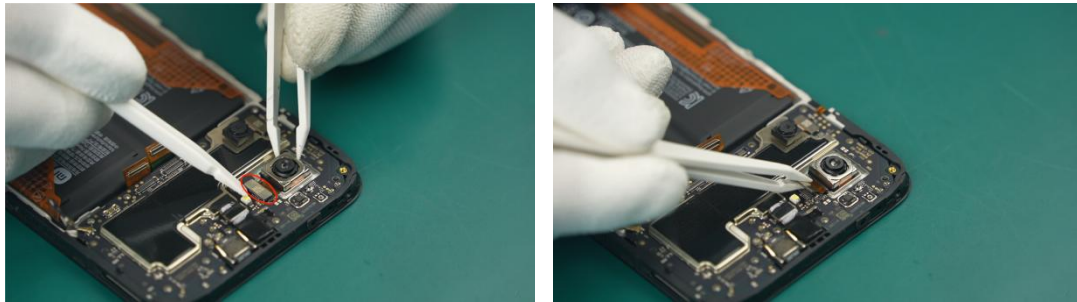

(2) Disconnect Camera-Rear-Macro-Depth and remove it from the device.

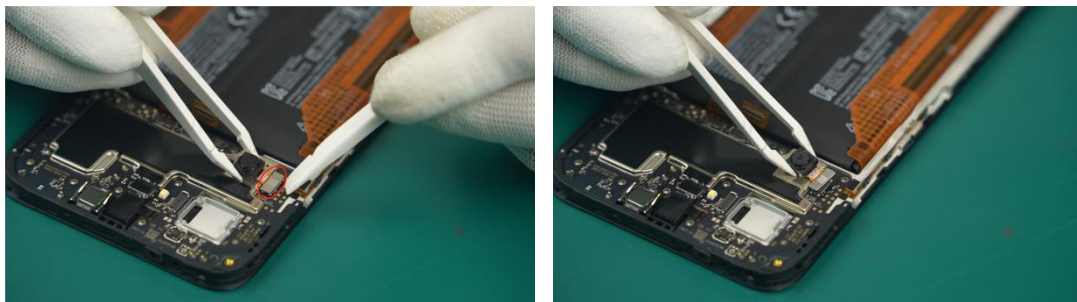

(3) Disconnect Camera-Front and remove it from the device.

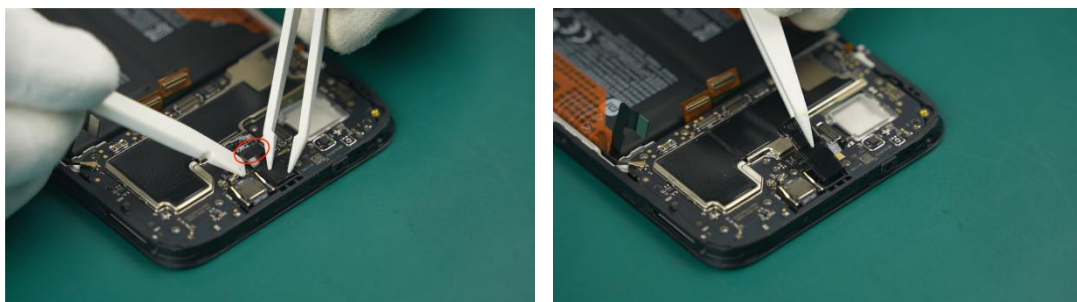


Do not touch the camera lens directly during operation to avoid scratching the lens.

- When removing the Radiating Copper Foil on the Camera-Front, be careful not to tear it too hard to avoid damage.
- The camera lens and sensor are very precise. Finger grease or dust will affect the image quality. Wear gloves or hold with a dust-free cloth when operating.
- Use tweezers to gently lift the pressure plate before pulling out the cable. Do not pull the cable directly.

7. Disconnect the Coaxial Cable:


Disconnect the Coaxial Cable-Black from the Mainboard Assy.

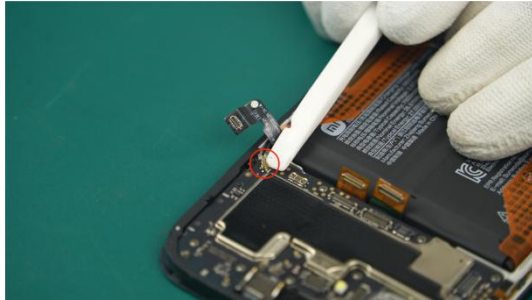


8. Remove the Mainboard Assy:

Remove the Mainboard Assy from the device.



 Carefully lift the Mainboard Assy with tweezers and remove the Mainboard Assy, being careful not to damage the PBA board.

- Do not touch the Mainboard Assy directly with metal tools to avoid scratching the Mainboard Assy and static damage.
- Use moderate force when holding components with tweezers to avoid squeezing small components such as capacitors and resistors.

 For Mainboard Assy assembly methods, please refer to the subsequent assembly tutorials in the manual.


9. Remove the Receiver:


Remove the Receiver from the device.




10. Remove the FPC Assy-Side Key:

Disconnect the FPC Assy-Side Key from the device and remove it.

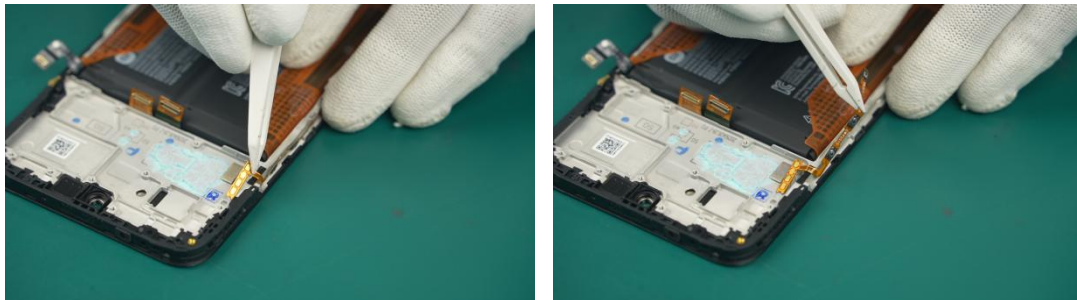


 Do not use metal tweezers or other hard tools as they may scratch the device.

 Use ESD Safe Tweezers to cut the adhesive between the FPC Assy-Side Key and the device. Use ESD Safe Tweezers to press one side of the FPC Assy-Side Key in the slot to lift up the other side of the FPC Assy-Side Key. Then use ESD Safe Tweezers to remove the FPC Assy-Side Key.

11. Remove the Sub-Board Assy:


(1) Remove the Screws.

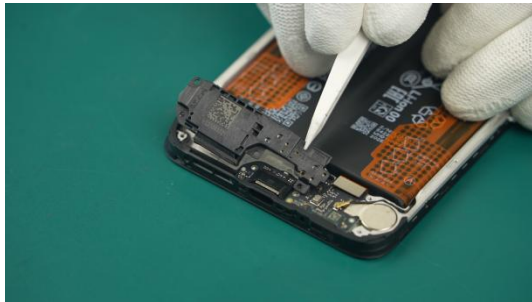

Do not use metal tweezers or other hard tools as they may scratch the device.

- Pay attention to the clips around the speaker assembly during operation. Make sure the clips are completely separated before proceeding to the next step to avoid damaging the speaker assembly.
- Use moderate force when holding components with tweezers to avoid squeezing small components such as capacitors and resistors.

(2) Disconnect the Main FPC Assy from the Sub-Board Assy;

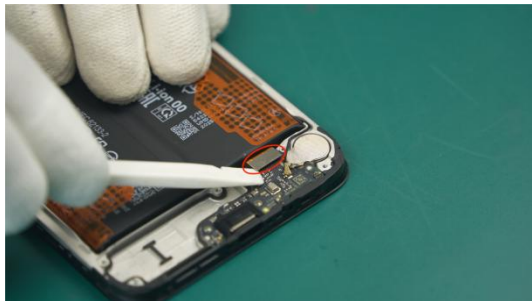

Be careful not to damage other components during operation.

(3) Disconnect the Coaxial Cable-Black from the Sub-Board Assy;




Do not use metal tweezers or other hard tools as they may scratch the device.

Disassembly and Assembly


(4) Tear off the Conductive Cloth-Motor.




(5) Remove the Sub-Board Assy from the device.

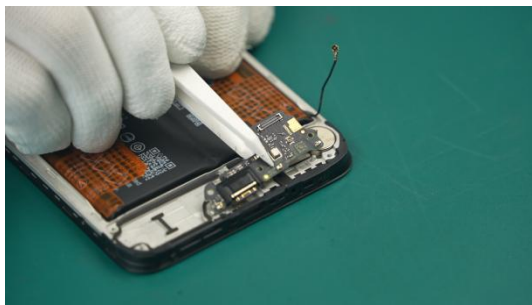

12. Remove the Vibrator:

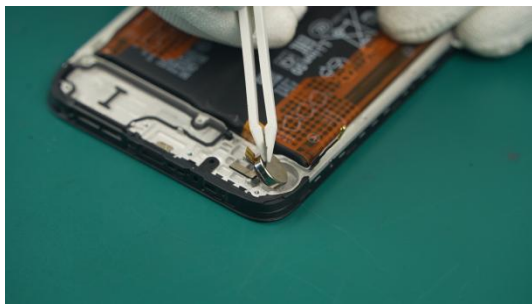


 When clamping components, use appropriate force to avoid damage to the components due to excessive force.


13. Remove the Battery:


- (1) Tear off the Easy Release Adhesive and remove the Battery.



- (2) Tear off the remaining Easy Release Adhesive on the device.

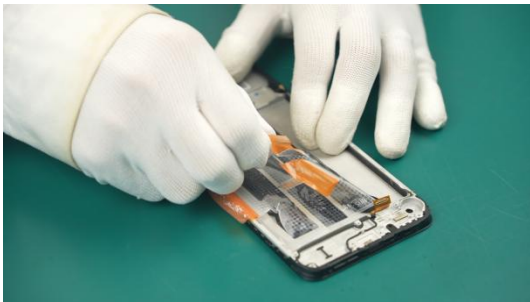


 Be careful not to damage the battery.

 You can use special alcohol to help remove the adhesive, or use the microwave to heat the heating bags, then heat the device before removing it.


14. Remove the Main FPC Assy:





 You can use special alcohol to help remove the adhesive, or use the microwave to heat the heating bags, then heat the device before removing it.

15. Remove the Coaxial Cable:

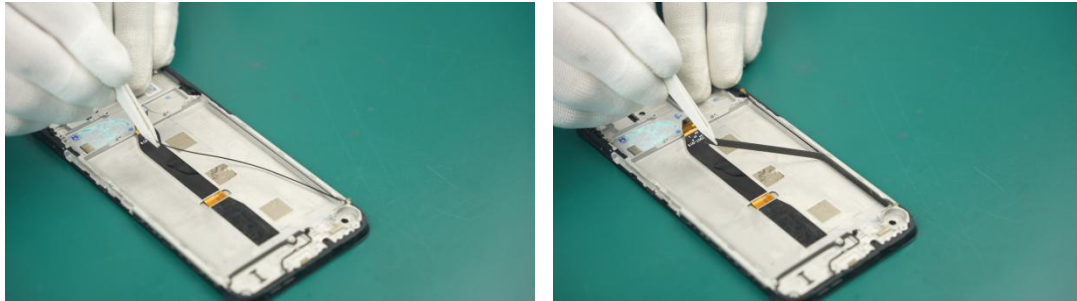Tear off the Coaxial Cable Tray Blocking Foam and remove the Coaxial Cable-Black from the device.




-  Be careful not to damage the wiring harness interface and surrounding components during operation.
- Do not pull the cable directly when disconnecting to avoid breaking it.
- Use tweezers to gently lift the pressure plate before pulling out the cable. Do not pull the cable directly.
- If the cable is stuck to the motherboard, use a Plastic Pry Bar to gently lift it up to avoid breaking the cable.
-  You can use the flat side of a Plastic pry bar to gently pry up the connector.
- Please tidy up the wiring harness after disconnecting to avoid affecting subsequent operations.


Assembly

 Before reassembly, please confirm the following:

- Thoroughly remove any residual adhesive.
- Prepare the screws and new adhesive required for the device.
- Wear an anti-static wrist strap and connect it to a grounded ESD safe mat.
- Do not leave any unassembled screws inside the device. Leaving screws inside the device may damage internal components such as the battery. Please be extremely careful during assembly.
- The composition of the product may vary by country, region, or repairer.


1. Assemble the Vibrator:

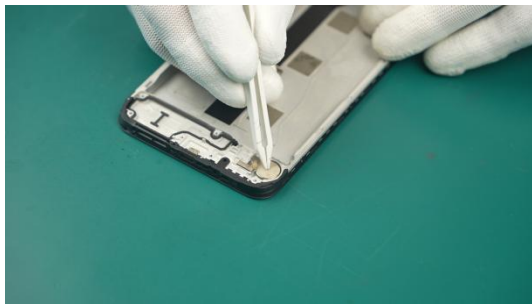

 Do not use metal tweezers or other hard tools as they may scratch the device.

2. Assemble the Sub-Board Assy:

Place the Sub-Board Assy in the correct position and press the Sub-Board Assy lightly to ensure it is installed in place.

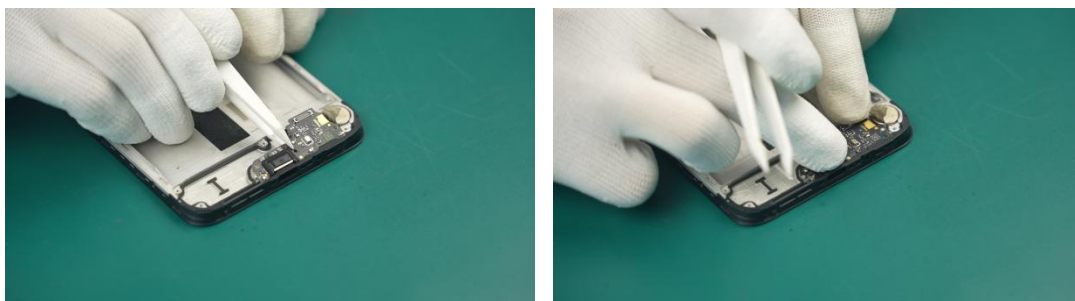



 Be careful not to damage other components during operation.

3. Assemble the Coaxial Cable:

- (1) Connect the Coaxial Cable-Black to the Sub-Board Assy and arrange the Coaxial Cable-Black into the cable trough.




-  Be careful not to damage the wiring harness when arranging it.
-  You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.


- (2) Fit the Coaxial Cable Tray Blocking Foam and press to ensure it fits in place.



4. Assemble the Speaker Assy:

Place the Speaker Assy into the correct position on the device.

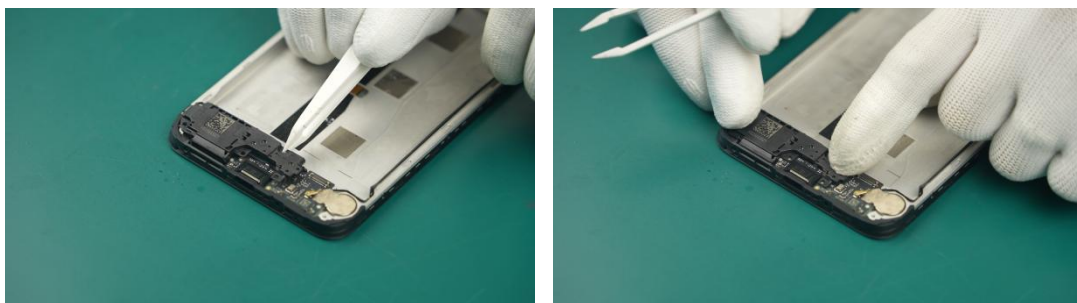



-  Press lightly to ensure it is installed in place.

5. Assemble the Main FPC Assy:


Connect the Main FPC Assy to the Sub-Board Assy and place it in the correct position on the device;




-  • Please press the Main FPC Assy lightly to ensure it is installed in place.
- Please do not use metal tweezers or other hard tools to avoid scratching the device.
- Please ensure that the Main FPC Assy fits flatly with the device to avoid damage to the Main FPC Assy caused by squeezing other accessories during subsequent assembly.
-  You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

6. Assemble the Receiver:


Place the Receiver into the correct position of the device and press it to ensure it is installed in place.

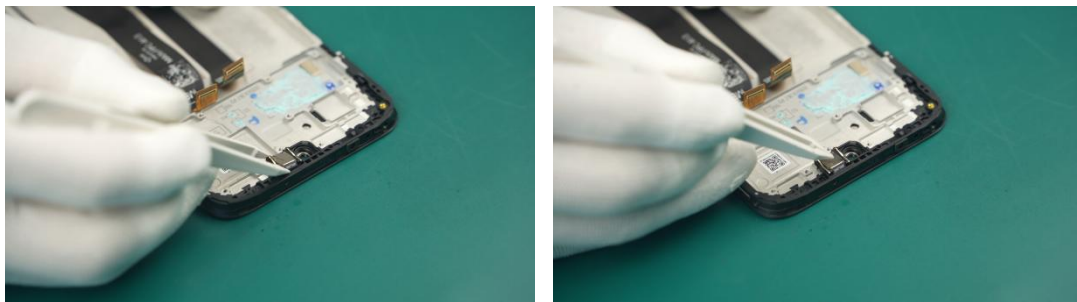

-  • Press lightly to ensure it is installed in place.
- Please do not use metal tweezers or other hard tools to avoid scratching the device.
- Please make sure that all the clips are locked into place. Otherwise, it will affect the subsequent assembly.

7. Assemble the FPC Assy-Side Key:

(1) Place the FPC Assy-Side Key into the correct position, press to ensure it clicks into place;

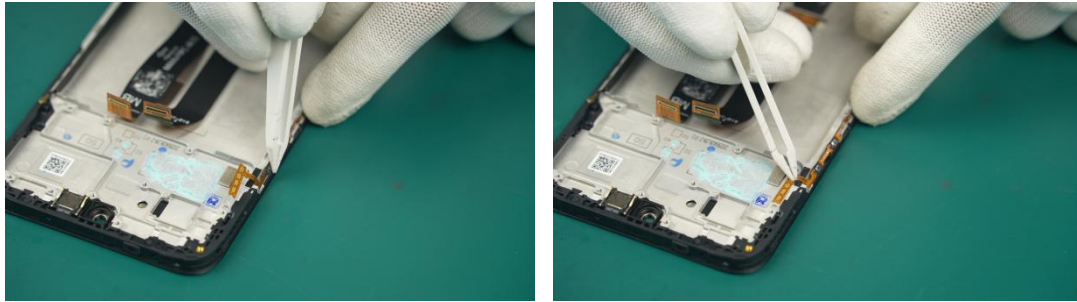


(2) Tidy up the wire harness to ensure it is installed in place.



- Please press the FPC Assy-Side key lightly to ensure it is installed in place.
- Please do not use metal tweezers or other hard tools to avoid scratching the device.

8. Assemble the Mainboard Assy:

Place the Mainboard Assy into the device and press firmly into place.

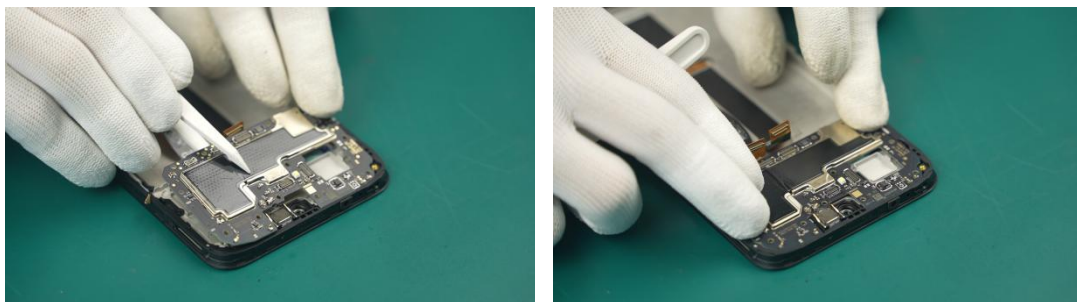


Please do not use metal tweezers or other hard tools to avoid scratching the device. Please check the components underneath when installing the Mainboard Assy. If the components underneath are not properly installed, the Mainboard Assy may not be properly installed.

9. Assemble the Camera Assy:

- (1) Place the Camera-Front into the correct position of the device and connect it to the Mainboard Assy;





-  • Do not touch the camera lens directly during operation to avoid scratching the lens.


- (2) Fit the Radiating Copper Foil flat;



-  Press gently to make sure the Radiating Copper Foil is evenly attached.


- (3) Place the Camera-Rear-Main into the correct position of the device and connect it to the Mainboard Assy;

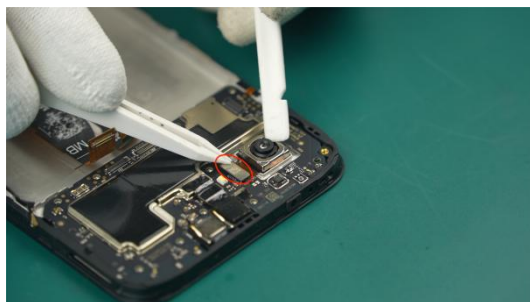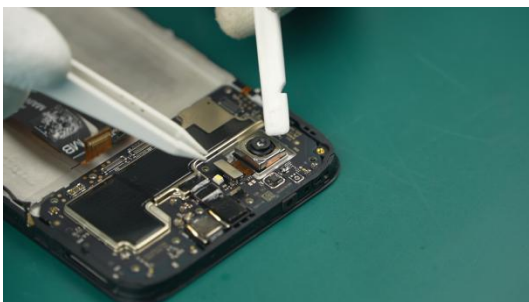



-  • Do not touch the camera lens directly during operation to avoid scratching the lens.

Disassembly and Assembly

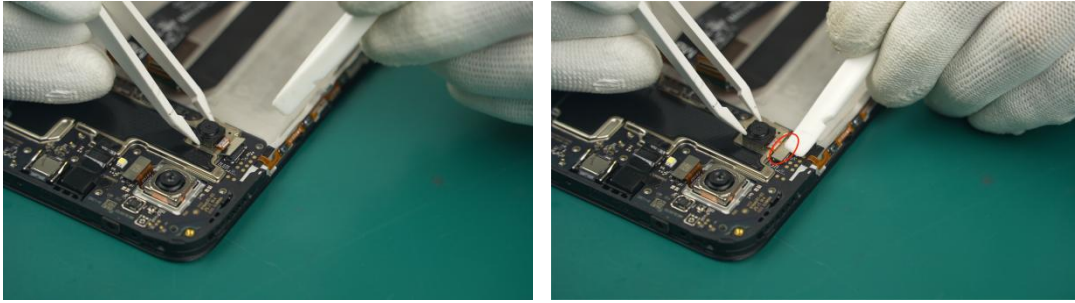
- (4) Place the Camera-Rear-Macro-Depth into the correct position of the device and connect it to the Mainboard Assy.




-  • Do not touch the camera lens directly during operation to avoid scratching the lens.
- Do not use hard tools during operation, as this may damage the Conductive Cloth or Graphite Sheet.
- To enhance contact in the exposed copper area of the main board assembly ensure that Blackout tape is smoothed out properly.
-  • You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.
- Attach the Copper Foil flatly. You can press lightly with your fingers to ensure it fits securely.

10. Connect the Main FPC Assy:


(1) Connect the Front Cover Display Module to the Mainboard Assy.

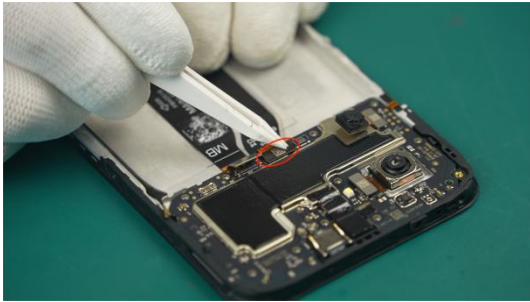

(2) Connect the Main FPC Assy to the Mainboard Assy in sequence.

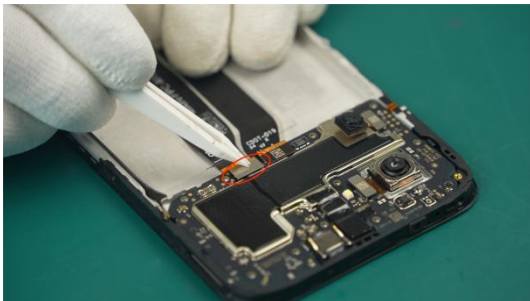

(3) Connect the Coaxial Cable-Black to the Mainboard Assy.

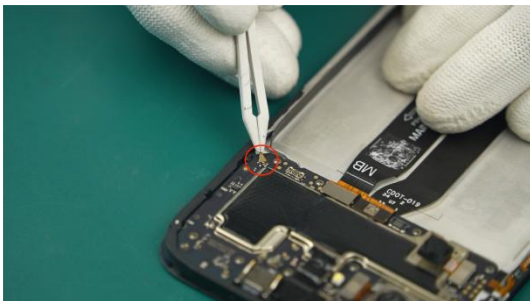


- Press lightly to ensure it is installed in place.

- Please do not use metal tweezers or other hard tools to avoid scratching the device.
- Please make sure that all the clips are locked into place, otherwise it will affect the subsequent assembly.




- You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

11. Assemble the Battery:


 If you are the customer, please refer to the following method:

(1) Remove the Easy Release Adhesive protective film from the new battery.




 Please avoid touching the surface of the Easy Release Adhesive to prevent contamination and maintain its adhesion effect.

(2) Align the battery with the correct position of the device, install and press to ensure it fits in place.

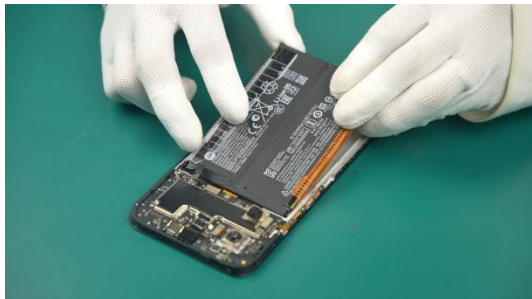

(3) Connect the Battery to the Mainboard Assy.




 • You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.


Disassembly and Assembly

 If you are a professional authorized repairer, please refer to the following method:


- (1) Align the positioning hole of the Easy Release Adhesive with the positioning column of the Battery adhesive applicator.

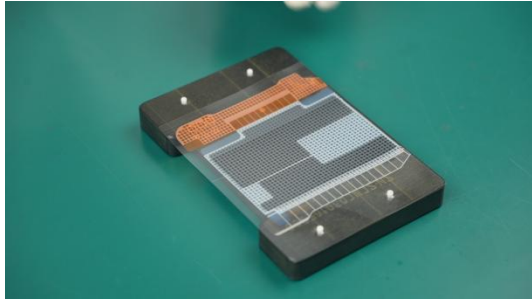

- (2) Tear off the protective film, try to avoid touching the adhesive surface to prevent it from being contaminated and affecting the assembly effect, then align and attach the batteries.

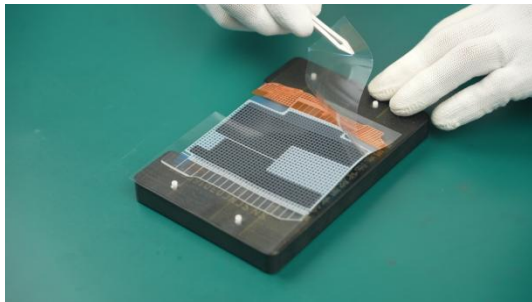


- (3) Tear off the protective film on the other side of the Easy Release Adhesive, and try to avoid touching the adhesive surface.

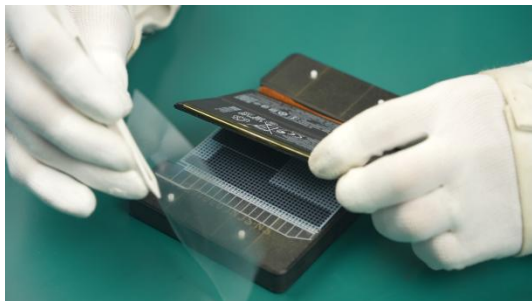

Disassembly and Assembly

- (4) Then tear off the protective film on the back of the Easy Release Adhesive, align the phone to the correct position, then put the Battery in.

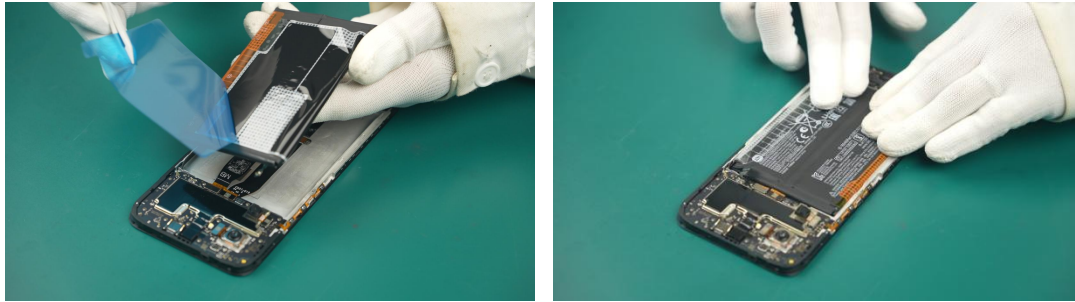

- (5) Connect the Battery to the Mainboard Assy.



- 💡 • You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

12. Assemble the Middle Frame Assy:

(1) Install the Fingerprint Module in the Middle Frame Assy.



• Please do not use metal tweezers or other hard tools to avoid scratching the device. Check whether the Fingerprint Module is installed properly. If the Fingerprint Module is not installed properly, it may affect subsequent installations.

(2) Connect the cable of the Middle Frame Assy to the Mainboard Assy.



• Please do not use metal tweezers or other hard tools to avoid scratching the device.




• You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.


(3) Install the Middle Frame Assy and press to ensure it is installed in place.



Disassembly and Assembly


(4) Tighten the Middle Frame Assy screws one by one.

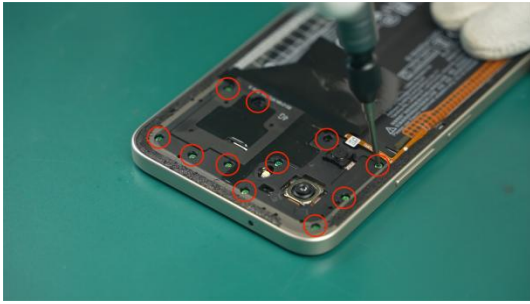


 Please check the number of screws installed to ensure that no unassembled screws are left inside the device.

(5) Tighten the Sub-Board Assy screws one by one.




 Please check the number of screws installed to ensure that no unassembled screws are left inside the device.


13. Assemble the Battery Cover Assy:

 If you are the customer, please refer to the following method:

(1) Tear off the new Adhesive-Battery Cover protective film, and carefully align it with the Battery Cover.



 Please try not to touch the surface of the Adhesive-Battery cover to avoid contamination of the Adhesive-Battery cover and affect the adhesion effect.


 When assembling, tear off half of the protective film first, hold the part that has not been torn off from the protective film, align it with the device, fit it in place, then tear off the protective film completely.


(2) Press to ensure that the Adhesive-Battery Cover and Battery Cover fit accurately.



Disassembly and Assembly


- (3) Tear off the protective film on the other side of the Adhesive-Battery Cover, install the Battery Cover, and press to ensure a firm fit.

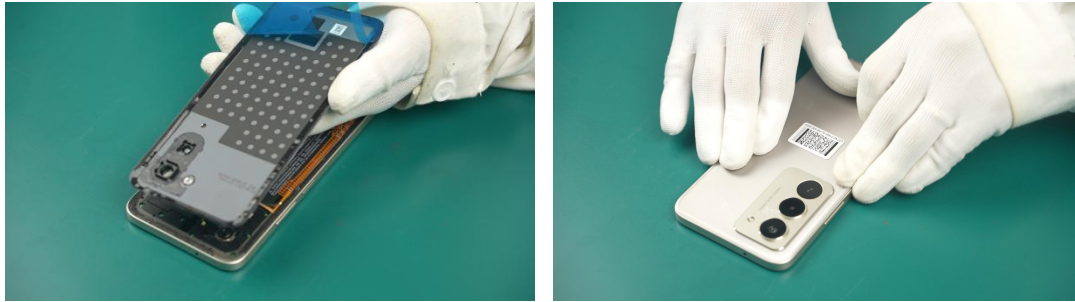

-  Before attaching the new Adhesive-Battery Cover, please clean the remaining Adhesive-Battery Cover.

-  If you are a professional authorized repairer, please refer to the following method:

- (1) Put the Battery Cover Adhesive into the Adhesive backing fixing tool, and align it with the positioning hole.

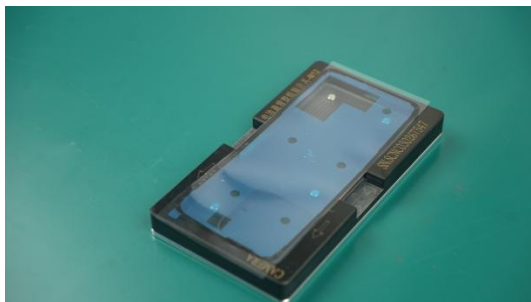

- (2) Tear off the protective film of the Battery Cover Adhesive, and do not touch the adhesive surface.



Disassembly and Assembly

- (3) Put the Battery Cover Assy into the Adhesive backing fixing tool, press gently to make the Battery Cover Adhesive and the Battery Cover Assy fit together.




- (4) Tear off the protective film on the other side of the Battery Cover Adhesive.



- (5) Align the Battery Cover Assy with the device, and press gently to install it in place.




14. Assemble the SIM Card Tray:

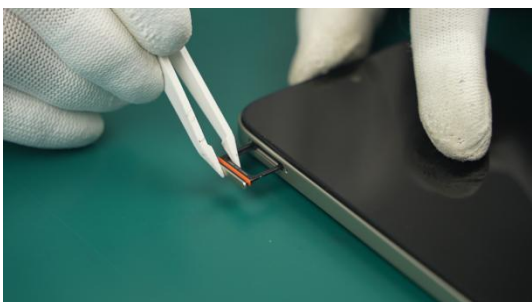

 Please do not use hard tools to install the SIM card tray to avoid scratching the device.

15. Crimp the phone:

-  If you are the customer, please press gently on a flat surface to ensure that the Battery Cover fits securely.




-  If you are a professional authorized repairer, please refer to the following method:

- (1) Place the phone in the Battery cover assembly press device.



- (2) Crimp it for 60 seconds using the Crimping tool.


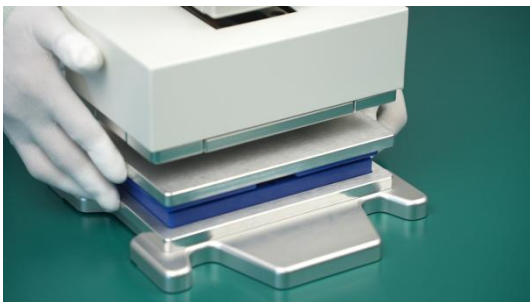


16. Test Phone Functions:

(1) Check whether the phone can be turned on normally.



(2) Test whether the phone's Wi-Fi, Bluetooth, sound, camera and other functions can be used normally.

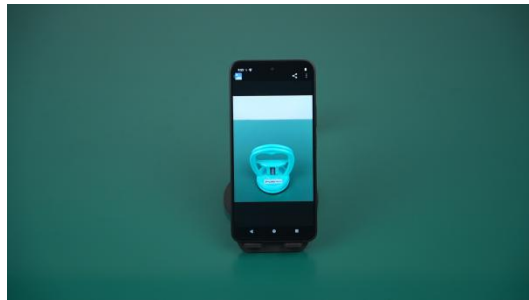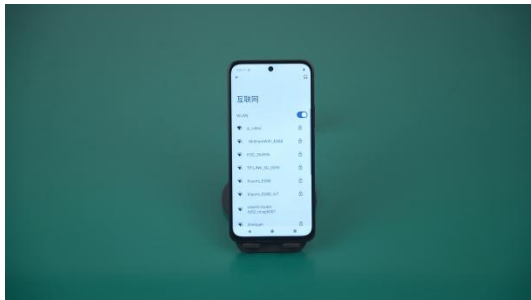

Calibration and Quality Inspection

To ensure proper assembly, it is recommended to calibrate and inspect the device after assembly. If any fault occurs during repair/assembly, calibration and inspection can help locate and identify the problem quickly. Please go to a Xiaomi Authorized Service Center for further assistance. Any fault caused by the repair may incur additional repair costs.

Calibration

Please refer to the link for specific calibration methods.

https://cdn.shopify.com/s/files/1/0955/8360/0979/files/Mobile_phone_basic_function_test.pdf?v=1747878433

Quality Inspection

Please refer to the link for specific inspection methods.

链接待提供

xiaomi

This manual is owned by Beijing Xiaomi Technology Co., Ltd.
Any unauthorized use of this guide may be punished according to applicable international/domestic laws.