

Repair Manual

Table of Contents

Instructions for Use

- 5 ----- Notes
- 6 ----- Repair Precautions
- 8 ----- ESD (Electrostatic Discharge) Precautions
- 8 ----- OTA Upgrade
- 9 ----- Icon Description

Materials and List

- 10 ----- Materials (All)
- 11 ----- Materials (Required for this disassembly and assembly)
- 12 ----- List

Tool Preparation

- 14 ----- Tools
- 19 ----- Consumables (adhesives and other materials)

Disassembly

- 20 ----- Remove the SIM Card Tray
- 21 ----- Heating up the Phone
- 24 ----- Remove the Battery Cover Assy
- 26 ----- Remove the Middle Frame Assy
- 28 ----- Disconnect the Cables
- 29 ----- Remove the Camera Assy
- 31 ----- Disconnect the Coaxial Cable
- 31 ----- Remove the Mainboard Assy
- 32 ----- Remove the Receiver
- 32 ----- Remove the FPC Assy-Side Key
- 33 ----- Remove the Sub-Board Assy
- 35 ----- Remove the Vibrator
- 36 ----- Remove the Battery
- 37 ----- Remove the Coaxial Cable
- 38 ----- Remove the Main FPC Assy

Assembly

- 39 ----- Assemble the Vibrator
- 40 ----- Assemble the Sub-Board Assy
- 41 ----- Assemble the Coaxial Cable
- 42 ----- Assemble the Main FPC Assy
- 43 ----- Assemble the Speaker Assy
- 44 ----- Assemble the Receiver
- 45 ----- Assemble the FPC Assy-Side Key
- 46 ----- Assemble the Mainboard Assy
- 47 ----- Assemble the Camera Assy
- 49 ----- Connect the Main FPC Assy

Table of Contents

50 -----	Assemble the Battery
53 -----	Assemble the Middle Frame Assy
55 -----	Assemble the Battery Cover Assy
58 -----	Assemble the SIM Card Tray
59 -----	Crimp Mobile Phone
60 -----	Test Phone Functions

Calibration and Quality Inspection

61 -----	Calibration
61 -----	Quality Inspection

Notes

All functions, features, specifications and other device information provided in this document, including but not limited to the device's advantages, design, price, components, performance, availability and functionality, are subject to subsequent changes without further notice. Xiaomi reserves the right to modify this document or the device described herein at any time without obligation to provide notice of such changes.

Repair Precautions

Xiaomi is not responsible for any damage or defects caused by repairs by unauthorized service providers, self-repairs, or repairs by non-professionals. Xiaomi is not responsible for damage to the device, personal injury, or other device safety issues caused by attempts to repair the device without following these repair and maintenance instructions.

Damage or defects caused by attempts to repair the device by anyone other than a Xiaomi-certified service provider are not covered by the warranty.

- Because most electronic components are sensitive to electromagnetic forces, use a demagnetizing tool designed for minor electronic repairs.
- When repairing the device, use a high-quality screwdriver. Avoid damaging the screw heads with inferior screwdrivers.
- Always use OEM (Original Equipment Manufacturer) replacement parts. Using third-party replacement parts may not work properly and may cause fire or personal injury.
- Certain parts, such as sensors (laser autofocus/proximity/fingerprint sensors), rear cameras, TSP (touch screen), speakers, and other components, may require calibration to guarantee their performance after repair.
- If your device is waterproof and dustproof, its waterproof and dustproof performance is not guaranteed if it is repaired by you or other non-professional workers.
- If you need to access the device's fault data or require a more detailed diagnosis, please visit a Xiaomi Service Center.
- If you need to replace an unsold part, please visit the Xiaomi Service Center and get further guidance.
- Before repairing, be sure to back up all important data stored in the device to avoid data loss.

Instructions for Use

Before performing repairs, be sure to wear appropriate safety equipment.

Xiaomi is not responsible for any injuries that may occur as a result of not wearing appropriate safety equipment. Please read the Disassembly and Assembly Tools carefully, understand the list of tools required to assemble and disassemble the device.

- Always repair the device in a safe place.
- Before repairing the device, make sure the device is turned off.
- If the device If the device is damaged, emits smoke, or if you smell something burning, stop using the device immediately and contact Xiaomi.
- It is recommended to wear safety equipment such as glasses, gloves, and masks when repairing the device.
- When removing the back cover, be careful not to damage the device.
- Before assembly, make sure there are no screws or foreign objects around the battery.
- During assembly, check for any abnormalities before reinstalling the back cover, and be careful not to hit or damage the battery. If the battery is damaged, please go to a Xiaomi Service Center.
- Do not heat the device directly in a microwave.
- Before repairing the device, make sure the battery is fully discharged.
- You can visit (<https://spare-parts.mi.com/>) to view device information, related materials and safety information.

ESD (Electrostatic Discharge) Precautions






Electrostatic discharge is the sudden flow of electricity between two charged objects due to contact, short circuit, or dielectric breakdown. ESD can negatively affect mobile devices, especially electronic components.

- It is recommended to use ESD-safe (antistatic) equipment, such as antistatic wrist straps and gloves, and ESD-safe mats when repairing devices.
- Increase airflow in the work area to reduce the possibility of accidental electrostatic discharge, which may increase in low humidity environments (such as air-conditioned rooms).

OTA Upgrade


You can check system updates by clicking on the system version number in the phone settings. If the system needs to be upgraded, you can click on the details to view the update log to understand the details of the upgrade and decide whether to update the system version based on your actual situation.

Icon Description


-  **Warning:** Situations that could cause harm to yourself or others;
-  **Caution:** Situations that may cause damage to your device or other equipment;
-  **Tip:** Notes, usage tips, or other information;
-  **Customers:** If you are the customer, please refer to the precautions/operations under this icon;
-  **Professional authorized repairer:** If you are the professional authorized repairer, please refer to the precautions/operations under this icon.

Materials and List

Materials (All)

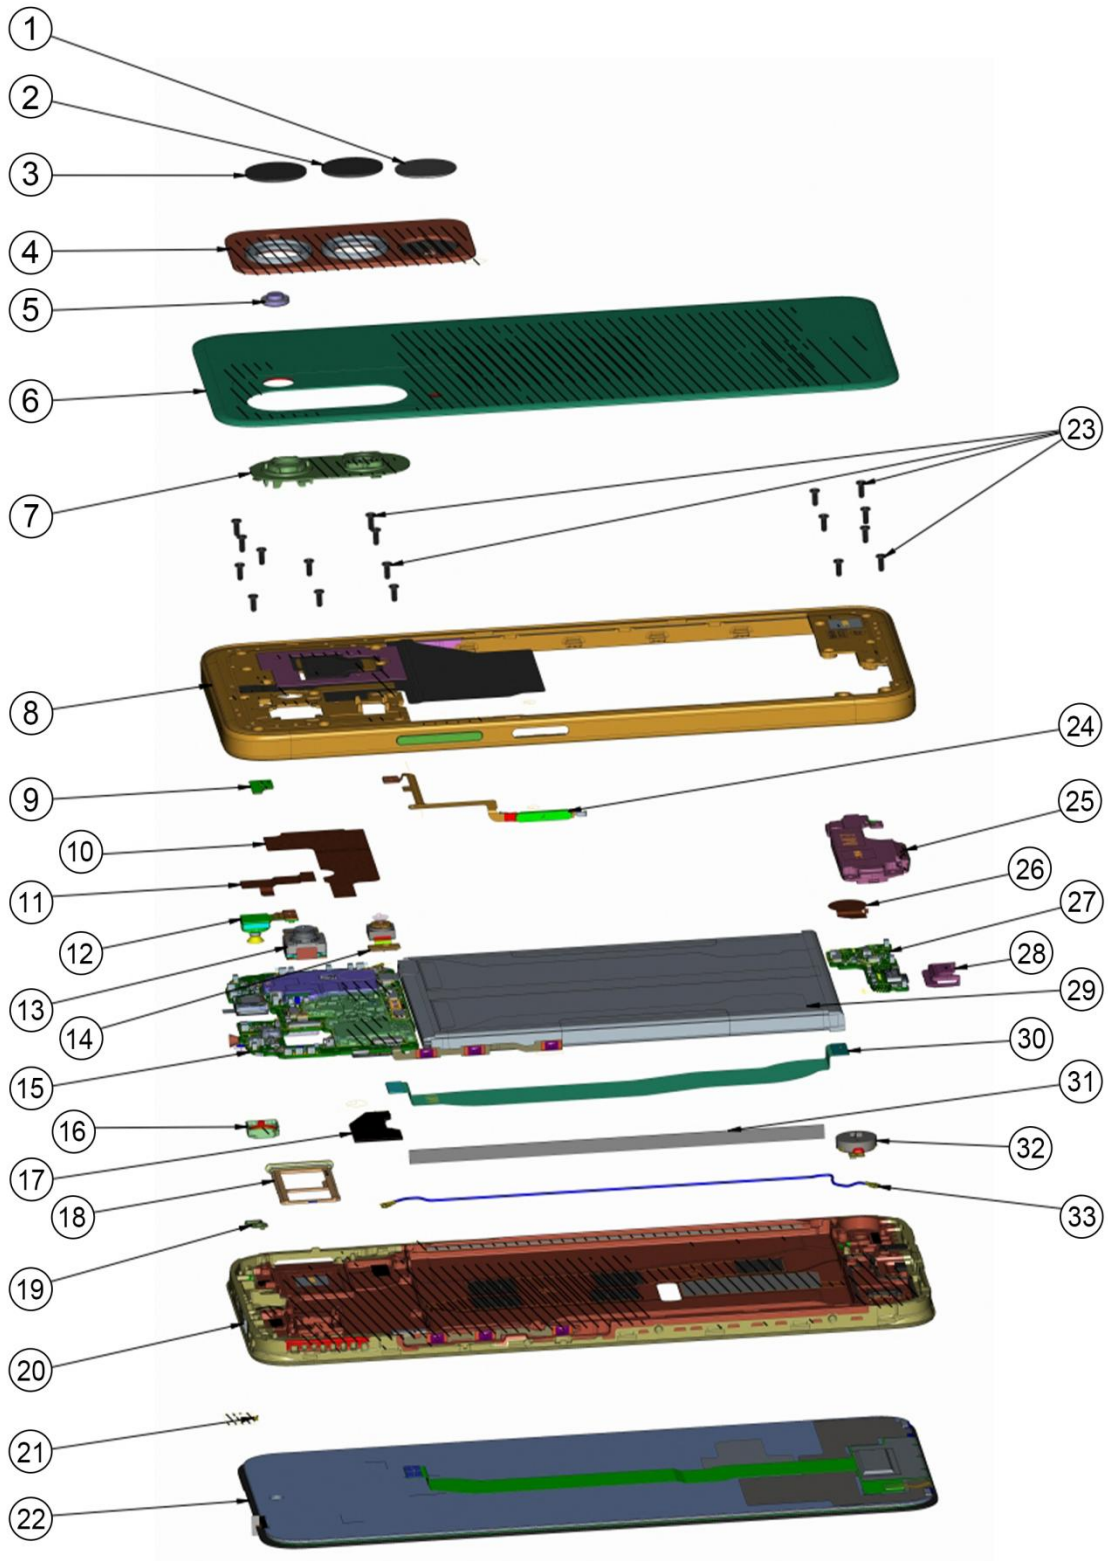

Materials (Required for this disassembly and assembly)

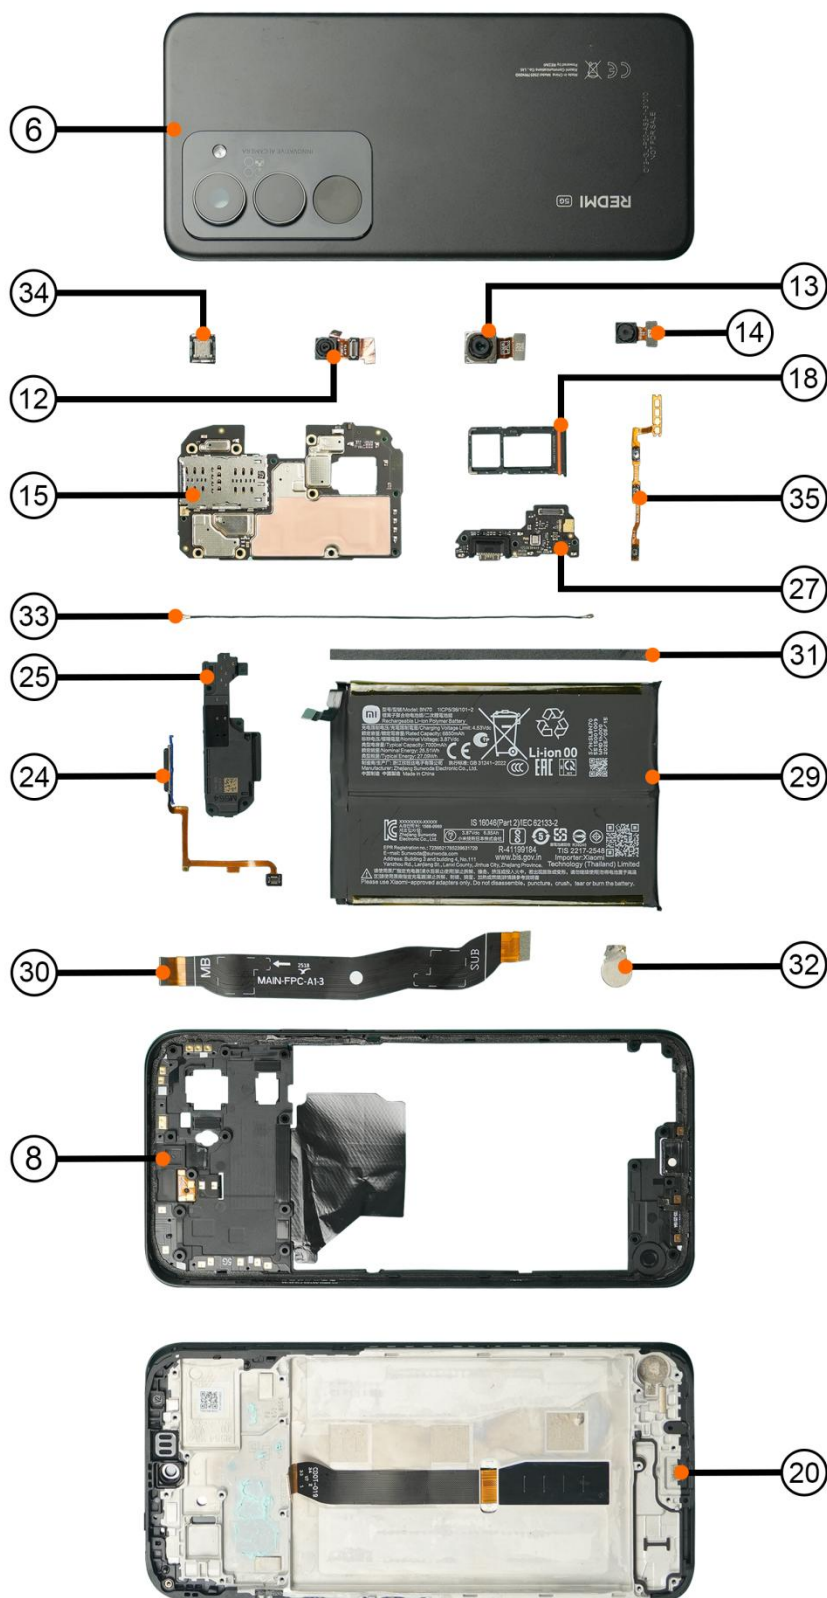

List


Serial number	Name
1	Lens-Deco Sheet
2	Lens-Rear Auxiliary Camera
3	Lens-Rear Main Camera
4	Rear Camera Hardware Deco Assy
5	Flash Light Lampshade
6	Battery Cover Assy
7	Deco Inner Frame Assy
8	Middle Frame Assy
9	Receiver Transfer FPC
10	Shield Cover Heat Dissipation Graphite Sheet
11	Radiating Copper Foil Front Camera
12	Camera-Front
13	Camera-Rear-Main
14	Camera-Rear-Macro-Depth
15	Mainboard Assy
16	Front Camera Frame
17	DDR&CPU support silicone pad
18	SIM Card Tray
19	Rubber-Light Sensor
20	Front Cover Assy
21	Light Sensor-TP
22	TP Module
23	Screw
24	Fingerprint Module
25	Speaker Assy
26	Conductive Cloth-Motor













Materials and List

Serial number	Name
27	Sub-Board Assy
28	Rubber-USB
29	Battery
30	Main FPC Assy
31	Coaxial Cable Tray Blocking Foam
32	Vibrator
33	Coaxial Cable
34	Receiver
35	FPC Assy-Side Key

















Tools and Materials

Tools










 When disassembling and assembling the phone, please be sure to wear protective equipment to prevent injury.

Tool Name	Diagram	Details	Target users
Safety Goggles		Prevent accidents during repair (protective equipment).	 
Safety Gloves (ESD safe, cut-resistant)		Prevent accidents during repair (protective equipment).	 
Safety Mask		Prevent accidents during repair (protective equipment).	 
Anti-static Wrist Strap		Prevent static electricity from damaging the device (recommended).	 

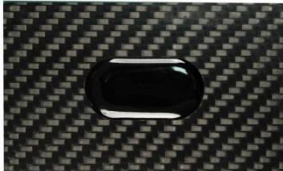


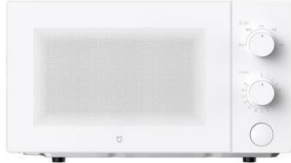



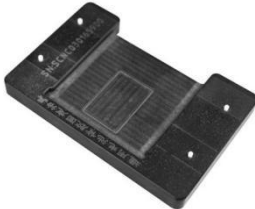

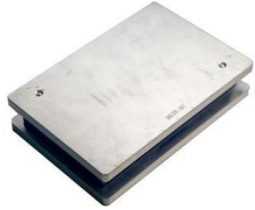

Tool Preparation

Tool Name	Diagram	Details	Target users
ESD Safe Mat		Prevent static electricity from damaging the device (recommended).	 
Ejection Pin		Used to remove the SIM card tray (necessary tool).	 
Phillips Screwdriver		Used to remove screws (necessary tool).	 
Plastic Pry Bar		For removing wiring harness connections and other components (necessary tool).	 
Suction Cup		Used for disassembling and assembling the back cover and screen (necessary tool);  If your display is cracked, the suction cup may not stick properly and be careful not to get cut by the broken pieces.	 








Tool Preparation

Tool Name	Diagram	Details	Target users
ESD Safe Tweezers		<p>Used for disassembly and assembly of small parts (necessary tool);</p> <p> Please do not use metal tweezers to avoid scratching the device and damaging it with static electricity.</p>	 
Plastic Pry Tool		<p>Used to remove the battery cover and other parts (necessary tool);</p> <p> Other sturdy sheets can be used instead (plastic sheets);</p> <p> Please do not use metal sheets or blades to avoid damaging the device.</p>	 


Tool Preparation




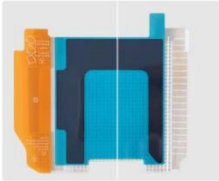





Tool Name	Diagram	Details	Target users
Heating Bag		Used to heat when removing the back cover (necessary tool);  Use the tabs as handles when heating to avoid burns.	
Micro-wave Oven		For heating the Heating Bag (necessary tool).	
Adhesive Backing Fixing Tool		Used to position the adhesive when sticking the battery cover.	
Battery Adhesive Applicator		Used to position the battery glue when sticking it.	
Battery Cover Assembly Press Device		Used when pressing the battery cover to evenly distribute the pressure on the battery cover.	

Tool Preparation

Tool Name	Diagram	Details	Target users
Heating Platform		When removing the battery cover, heat the adhesive on the battery cover to make it easier to separate the battery cover from the device.	
Crimping Tool		Used when pressing the battery cover, so that the pressure can be precisely controlled.	
Air Tightness Tester		Used to detect the air tightness of mobile phones;  If the phone is dustproof and waterproof, the air tightness of the phone needs to be tested after assembly.	

Consumables (adhesives and other materials)

-  Consumables may vary depending on the repair parts, country, region or repair provider.
The content in the table is for reference only.

Name	Diagram	Details	Target users
Battery Cover Adhesive		Used when attaching the battery cover to the device.	 
Easy Release Adhesive-Battery		Used when attaching the battery to the device.	 
Front Cover Display Module		Used when replacing the screen.	 


Disassembly

💡 Before disassembly

- Make sure your phone data is backed up to prevent loss of important data.
- Disconnect the device from the power source and turn it off.
- Wear an anti-static wrist strap and connect it to a grounded ESD safety mat.
- The composition of the product may vary by country, region, or repairer.

1. Remove the SIM Card Tray:


Insert the ejection pin into the hole of the SIM Card Tray to loosen the tray and pull out the tray gently from the tray slot.

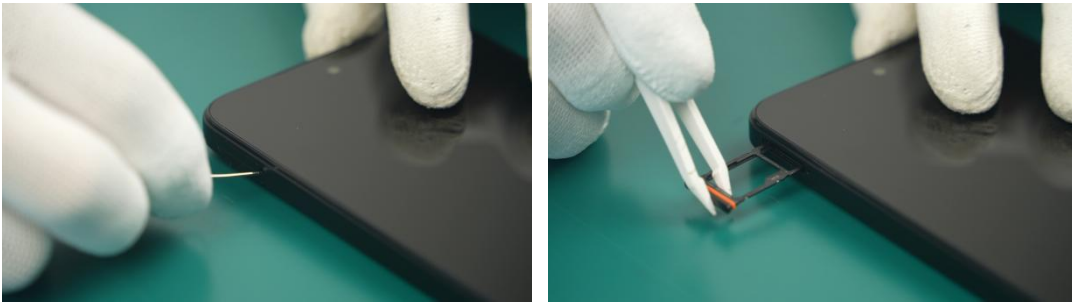



📁 When removing the SIM Card Tray, it is recommended to use your hands or plastic tweezers to avoid scratching the appearance.

💡 For the assembly method of the SIM Card Tray, please refer to the subsequent assembly tutorial in the manual.


2. Heating up the Phone:

 If you are the customer, please refer to the following method:

-  • It is possible for the device or battery to be damaged by heat.
 - Do not heat the device in a microwave. Doing so could cause an explosion.
-  • Follow the heating bag's instructions for heating. The recommended time for heating the bag is 50 seconds in a 1000W microwave and 70 seconds in a 700W microwave. (Correct temperature for use: 55-65 °C.)
 - Be careful not to damage the device through excessive heat. (It is recommended to disassemble the device in an area with a temperature gauge.)

(1) Heat the Heating Bag in the microwave for 2-5 minutes until it reaches about 70 degrees Celsius.




 The heating time needs to be adjusted according to the power of your microwave.

Disassembly and Assembly

(2) Take the Heating Bag out of the microwave.



 Use the label as a handle when removing the Heating Bag to avoid burns.

(3) Place the phone on the Heating Bag and heat it for about 1-2 minutes.



Disassembly and Assembly


 If you are a professional authorized repairer, please refer to the following method:

(1) Use a heating platform and wait for it to heat up to about 70 degrees Celsius.



(2) Place the phone on the heating platform and continue heating for 1-2 minutes.



 Please heat the device within the specified temperature and time, otherwise it may be damaged or affect subsequent operations.

3. Remove the Battery Cover Assy:

(1) Use the Suction Cup to secure the Battery Cover Assy.



💡 If the Suction Cup is not used, the device may move during operation, affecting operation.

(2) Use the Plastic Pry Tool to gently cut the adhesive on the Battery Cover Assy.



💡 Use the Plastic Pry Tool to slide along the left edge of the device to cut the glue, leaving the Plastic Pry Tool on the left edge side when finished to prevent the adhesive from resealing.

- 📁 • As the Battery Cover Assy may be damaged by excessive force, be careful not to damage the Battery Cover Assy.
- Do not insert the Plastic Pry Tool too deeply into the device as the internal circuitry may be damaged.

Disassembly and Assembly

- (3) Use the Plastic Pry Tool to cut all the glue around the Battery Cover Assy as described above, and then carefully separate the Battery Cover Assy from the device.



- Be careful not to damage the Battery Cover Assy, as excessive force may damage the Battery Cover Assy.
 - Do not insert the Plastic Pry Tool too far into the device, as it may damage the internal circuitry.
- 💡 If it's difficult to create a gap, reheat to further soften the adhesive. When reheating, do not reheat for more than 30 seconds.

- (4) Hold the Suction Cup handle and gently remove the Battery Cover Assy.




- Please make sure the suction cup is firmly fixed to avoid affecting the operation.
- ⚠️ Anti-shattering of glass/ceramic back cover:
- Avoid pressing hard on the center of the back cover when separating (especially for curved screen models) to prevent glass cracking due to stress concentration.
 - If the back cover is broken, fix the fragments with tape before operation to avoid scratching your fingers or dropping them into the device.


4. Remove the Middle Frame Assy:


(1) Use a needle screwdriver to remove the screws on the Mainboard Assy.




 Check the number of screws that have been removed and keep them in a safe place to ensure that no unassembled screws are left inside the device during the assembly process.


(2) Use a needle screwdriver to remove the screws on the Sub-Board Assy.

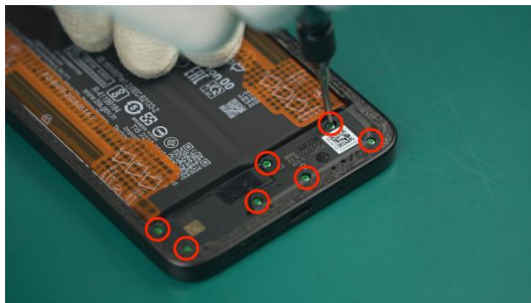

 Check the number of screws that have been removed and keep them in a safe place to ensure that no unassembled screws are left inside the device during the assembly process.


(3) Use a Plastic pry tool to pry open the Middle Frame Assy clips.

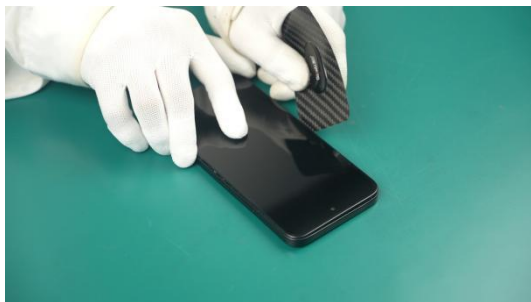


 You can use a Plastic Pry Bar to pry open the fixing clips. Please be careful not to use brute force to avoid damaging the device.

Disassembly and Assembly


- (4) Lift the Middle Frame Assy and disconnect the cable of the Fingerprint Module from the device, then remove the Middle Frame Assy.

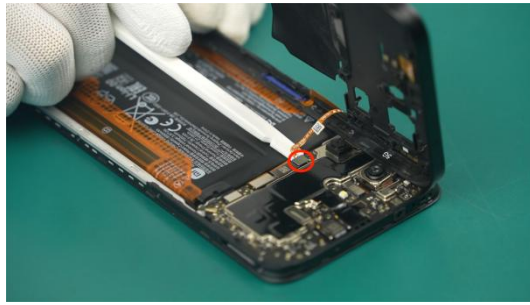

-  Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.


- (5) Remove the Fingerprint Module from the Middle Frame Assy.



-  • Please keep small parts properly, as missing parts may cause the device to fail to start up.
- Do not use metal tweezers or other hard tools as they may scratch the device.


5. Disconnect the Cables:

(1) Disconnect the Battery Cables.

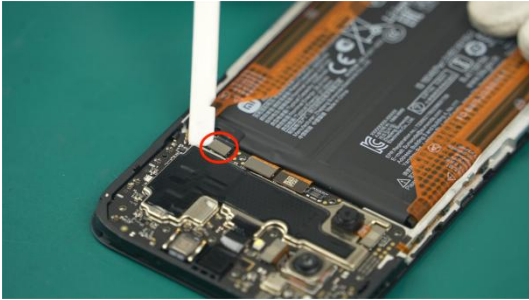

- For your safety, always disconnect the battery connector first.
- Be careful not to damage the battery.

(2) Disconnect the Main FPC Assy from the Mainboard Assy.

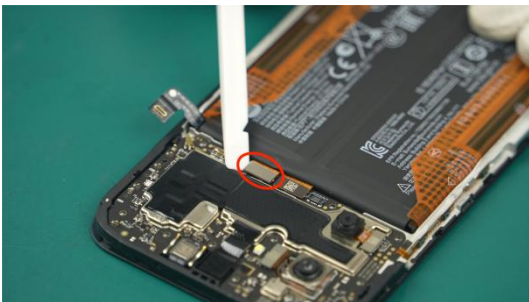


Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.

(3) Disconnect the Front Cover Display Module from the Mainboard Assy.




Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.



6. Remove the Camera Assy:

 Please be careful when removing the Camera Assy:

- Do not touch the camera lens directly during operation to avoid scratching the lens.
- The camera lens and sensor are very precise. Finger grease or dust will affect the image quality. Wear gloves or hold with a dust-free cloth when operating.
- If you need to clean the lens, use special lens paper or cotton swab dipped in a small amount of anhydrous alcohol to gently wipe it. Do not use paper towels or hard objects to scratch it.
- The camera is usually connected to the motherboard via an FPC cable. You need to disconnect the cable interface before disassembly.
- Use tweezers to gently lift the pressure plate before pulling out the cable. Do not pull the cable directly.
- If the cable is stuck to the motherboard, use a Plastic Pry Bar to gently lift it up to avoid breaking the cable.

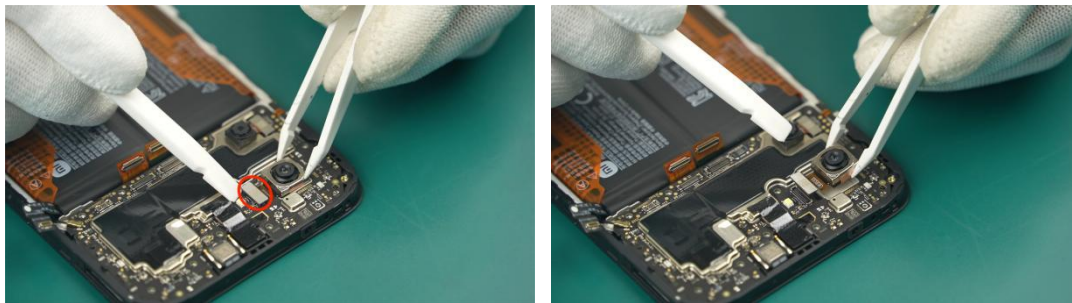
(1) Disconnect Camera-Rear-Main and remove it from the device.



-  • Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.
- Do not touch the camera lens directly during operation to avoid scratching the lens.
-  When disassembling, you can shake it gently to loosen the installation between the camera and the device to facilitate disassembly.



Disassembly and Assembly

(2) Disconnect Camera-Rear-Macro-Depth and remove it from the device.

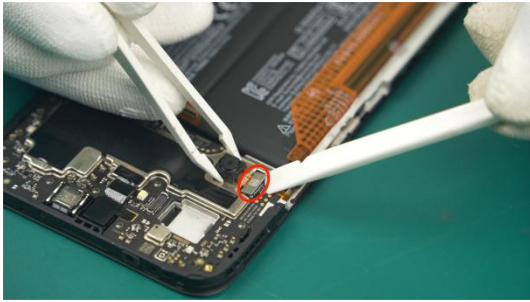

- Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.
- Do not touch the camera lens directly during operation to avoid scratching the lens.
- 💡 When disassembling, you can shake it gently to loosen the installation between the camera and the device to facilitate disassembly.


(3) Disconnect Camera-Front and remove it from the device.

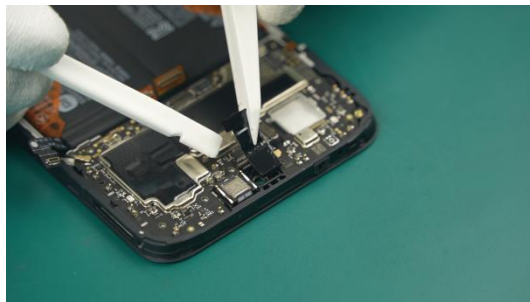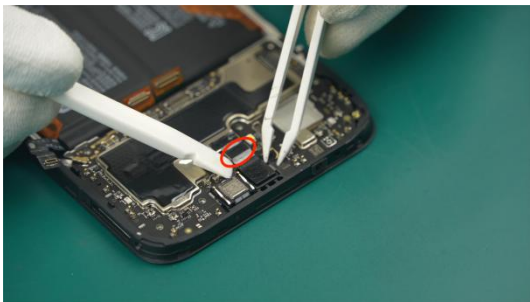



- 💡 Please carefully tear off the Radiating Copper Foil first. You can use special alcohol to assist the operation.
- Please be careful to avoid damaging the Conductive Cloth.
- Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.
- Do not touch the camera lens directly during operation to avoid scratching the lens.

7. Disconnect the Coaxial Cable:

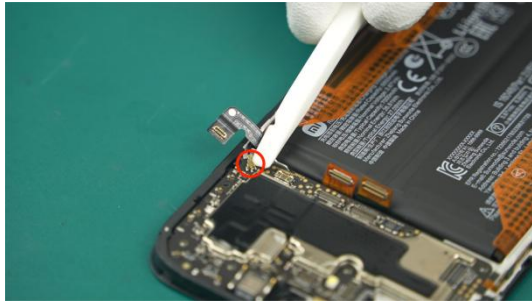Disconnect the Coaxial Cable-Black from the Mainboard Assy.




-  Do not pull the cable directly when disconnecting to avoid breaking it.
-  Please tidy up the wiring harness after disconnecting to avoid affecting subsequent operations.

8. Remove the Mainboard Assy:


Remove the Mainboard Assy from the device.



-  Carefully lift the Mainboard Assy with tweezers and remove the Mainboard Assy, being careful not to damage the PBA board.
- Do not touch the Mainboard Assy directly with metal tools to avoid scratching the Mainboard Assy and static damage.
- Use moderate force when holding components with tweezers to avoid squeezing small components such as capacitors and resistors.

9. Remove the Receiver:





-  • Please keep small parts properly, as missing parts may cause the device to fail to start up.
- Do not use metal tweezers or other hard tools as they may scratch the device.

10. Remove the FPC Assy-Side Key:

Disconnect the FPC Assy-Side Key from the device and remove it.



-  Use Plastic Pry Bar to cut the adhesive between the FPC Assy-Side Key and the device.
You can use special alcohol to assist.
-  Do not use metal tweezers or other hard tools as they may scratch the device.


11. Remove the Sub-Board Assy:

(1) Remove the Speaker Assy.



- Pay attention to the clips around the Speaker Assy during operation. Make sure the clips are completely separated before proceeding to the next step to avoid damaging the Speaker Assy.
- Use moderate force when holding components with tweezers to avoid squeezing small components such as capacitors and resistors.

(2) Disconnect the Main FPC Assy from the Sub-Board Assy.

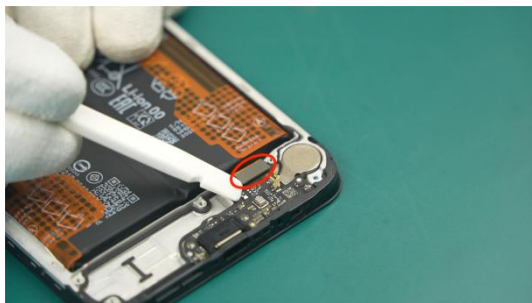



- Please disconnect the interface in parallel during operation to avoid tilting and pulling, which may cause damage to the interface.

Disassembly and Assembly


(3) Disconnect the Coaxial Cable-Black from the Sub-Board Assy.




 Do not pull the Coaxial Cable interface during operation to avoid damaging the Coaxial Cable.

-  • You can use the flat side of a Plastic pry bar to gently pry up the connector.
- Please tidy up the wiring harness after disconnecting to avoid affecting subsequent operations.


(4) Tear off the Conductive Cloth-Vibrator.

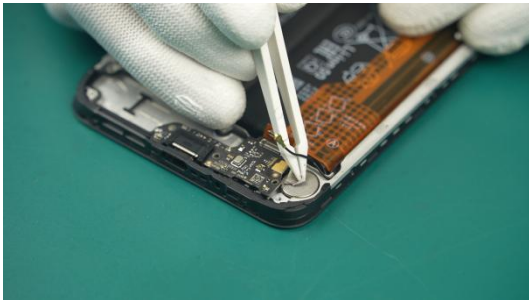

-  Please tear the Conductive Cloth-Vibrator carefully without damaging it. If the Conductive Cloth-Vibrator is too tightly bonded, you can use special alcohol to assist the operation.

(5) Remove the Sub-Board Assy.




 Carefully lift the Sub-Board Assy with tweezers and remove the Sub-Board Assy, being careful not to damage the PBA board.

- Do not touch the Sub-Board Assy directly with metal tools to avoid scratching the Sub-Board Assy and static damage.
- Use moderate force when holding components with tweezers to avoid squeezing small components such as capacitors and resistors.

12. Remove the Vibrator:

Use tweezers to remove the Vibrator.



 Please do not use metal tweezers or other hard tools to avoid scratching the device.

13. Remove the Battery:


(1) Tear off the Easy Release Adhesive.





(2) Remove the Battery.

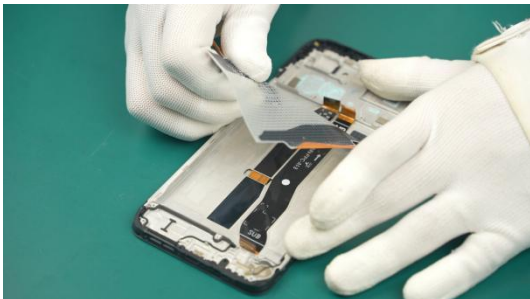

(3) Remove any remaining Easy Release Adhesive from the device.





 Be careful not to damage the battery.

 You can use special alcohol to help remove the adhesive, or use the microwave to heat the heating bags, then heat the device before removing it.


14. Remove the Coaxial Cable:


(1) Tear off the Coaxial Cable Tray Blocking Foam.

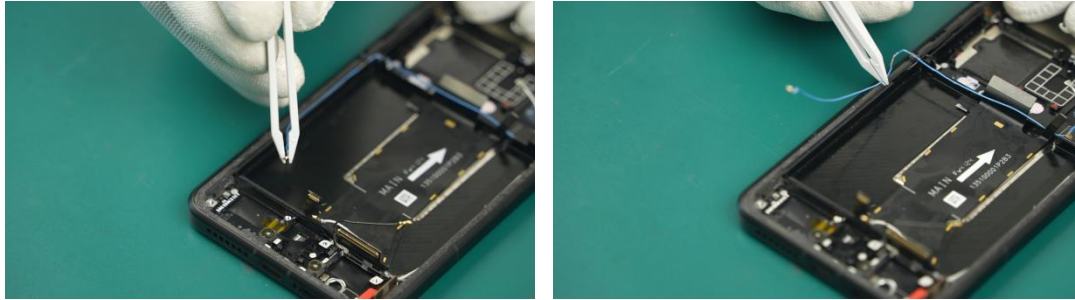

 Please carefully tear off the Coaxial Cable Tray Blocking Foam. Do not use brute force, as this may damage the Coaxial Cable Tray Blocking Foam.

(2) Remove the Coaxial Cable-Black from the device.

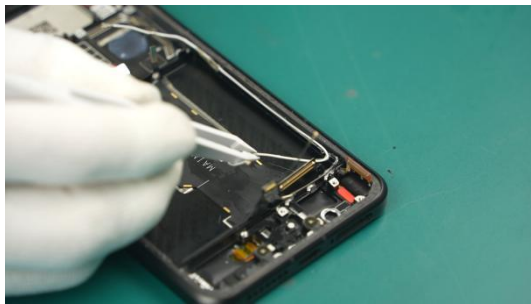

-  • Do not pull the interface of the Coaxial Cable to avoid breaking the interface of the Coaxial Cable.
- Do not use brute force to pull the cable.

15. Remove the Main FPC Assy:

Carefully peel off the adhesive between the Main FPC Assy and the device and remove it.



- 💡 You can use special alcohol to help remove the adhesive, or use the microwave to heat the heating bags, then heat the device before removing it.

Assembly


 Before reassembly, please confirm the following:

- Thoroughly remove any residual adhesive.
- Prepare the screws and new adhesive required for the device.
- Wear an anti-static wrist strap and connect it to a grounded ESD safe mat.
- Do not leave any unassembled screws inside the device. Leaving screws inside the device may damage internal components such as the battery. Please be extremely careful during assembly.
- The composition of the product may vary by country, region, or repairer.

1. Assemble the Vibrator:

Place the Vibrator into the correct position on the device and snap the cable into place.



 Do not use metal tweezers or other hard tools as they may scratch the device.

2. Assemble the Sub-Board Assy:

(1) Place the Sub-Board Assy in the correct position.




(2) Press the Sub-Board Assy gently to ensure it is properly installed.




- Please check the components underneath when installing the Sub-Board Assy. If the components underneath are not properly installed, the Sub-Board Assy may not be properly installed.
- Please make sure that all the clips are locked into place, otherwise it will affect the subsequent installation.

3. Assemble the Coaxial Cable:


(1) Connect the Coaxial Cable-Black to the Sub-Board Assy.

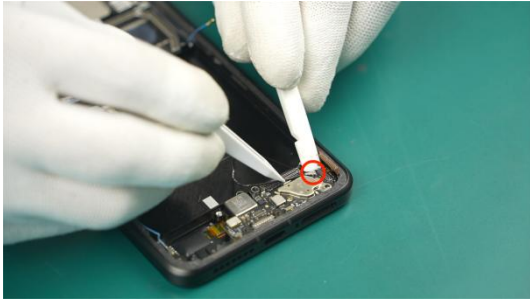


 You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.


(2) Arrange the Coaxial Cable-Black into the cable trough.



 Be careful not to damage the wiring harness when arranging it.

 When organizing the wiring harness, start organizing from one end of the Sub Board Assy connection.

(3) Fit the Coaxial Cable Tray Blocking Foam and press to ensure it fits in place.

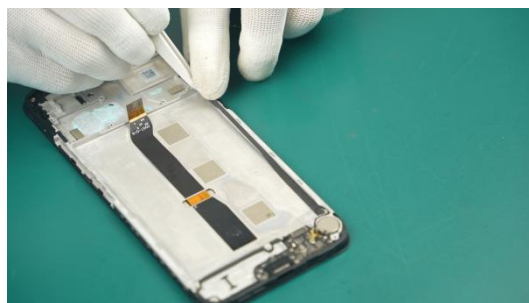


 Please ensure that the Coaxial Cable Tray Blocking Foam fits flatly, otherwise it will affect subsequent installation.

4. Assemble the Main FPC Assy:


(1) Connect the Main FPC Assy to the Sub-Board Assy.



 You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

(2) Place the Main FPC Assy in the correct position on the device. Press gently to ensure it is seated.



 During the subsequent assembly process, you need to check whether the FPC Assy is lifted up to avoid squeezing the harness during assembly.


5. Assemble the Speaker Assy:

- (1) Place the Speaker Assy into the correct position of the device, making sure not to squeeze the components below.



- (2) Press gently to ensure it is installed in place.



-  Please make sure that all the clips are locked into place, otherwise it will affect the subsequent assembly.


6. Assemble the Receiver:

(1) Place the Receiver into the correct position on the device.



(2) Gently press it to make sure it is securely in place.



 Please do not use metal tweezers or other hard tools to avoid scratching the device.


7. Assemble the FPC Assy-Side Key:

- (1) Place the FPC Assy-Side Key into the correct position, and press to ensure it clicks into place.




- (2) Tidy up the wiring harness to ensure it is installed in place.




-  During the subsequent assembly process, you need to check whether the FPC Assy-Side Key is lifted up to avoid squeezing the harness during assembly.

8. Assemble the Mainboard Assy:


Place the Mainboard Assy into the device and press to secure it in place.

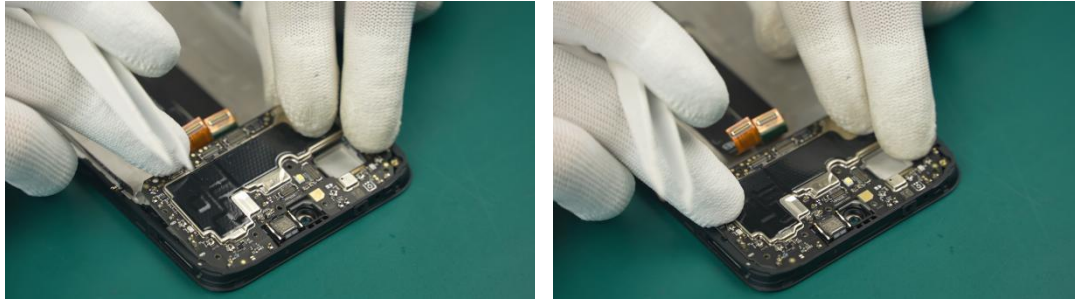



 Please make sure that all the clips are locked into place, otherwise it will affect the subsequent assembly.

9. Assemble the Camera Assy:

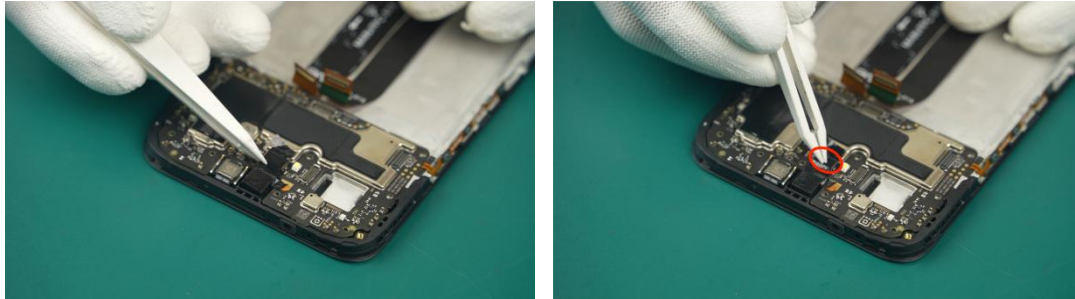
(1) Place Camera-Front in the correct position of the device and connect it to the Mainboard Assy.




 Do not touch the camera lens directly during operation to avoid scratching the lens.

 You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

(2) Fit the Radiating Copper Foil flat.

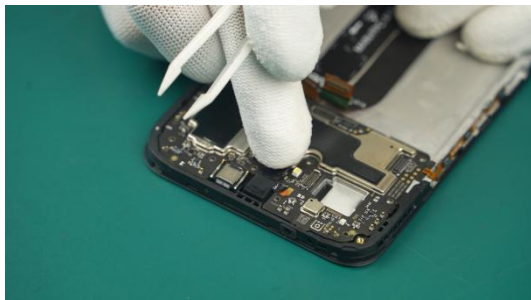




 Do not use hard tools during operation, as this may damage the Copper Foil.

 Attach the Copper Foil flatly. You can press lightly with your fingers to ensure it fits securely.


Disassembly and Assembly

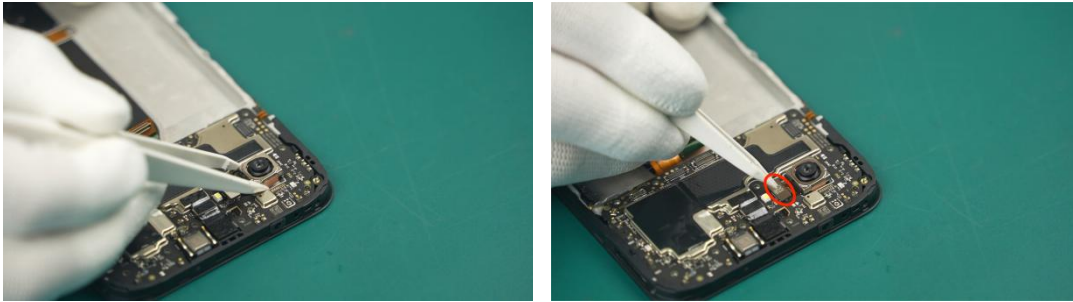

- (3) Place Camera-Rear-Main in the correct position of the device and connect it to the Mainboard Assy.



-  Do not touch the camera lens directly during operation to avoid scratching the lens.
-  You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

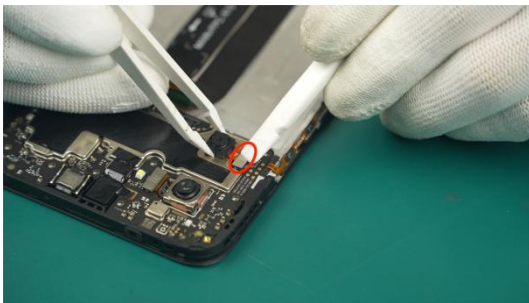
- (4) Install Camera-Rear-Macro-Depth and connect it to the Mainboard Assy.




-  Do not touch the camera lens directly during operation to avoid scratching the lens.
-  You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

10. Connect the Main FPC Assy:

(1) Connect the Front Cover Display Module to the Mainboard Assy.

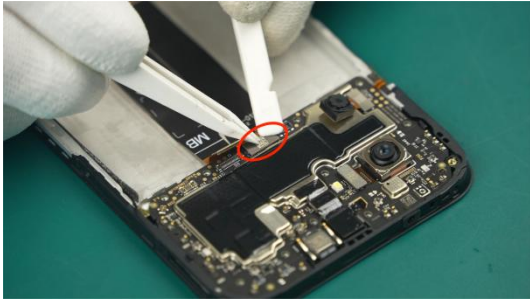

(2) Connect the Main FPC Assy to the Mainboard Assy.

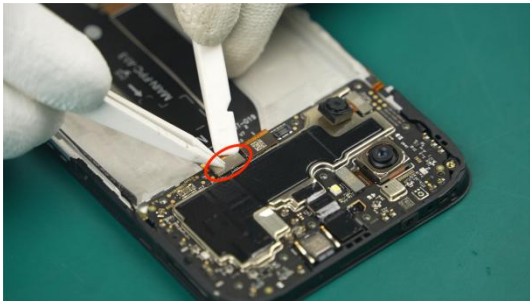


Please ensure that the Main FPC Assy fits flatly with the device to avoid damage to the Main FPC Assy caused by squeezing other accessories during subsequent assembly.




You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

(3) Connect the Coaxial Cable-Black to the Mainboard Assy.

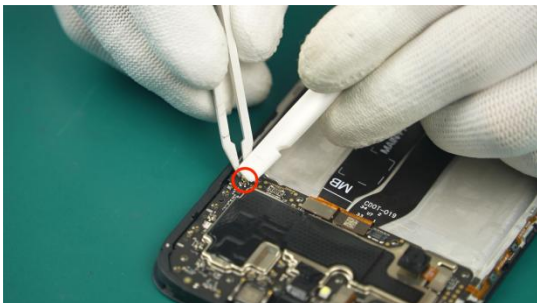



You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

11. Assemble the Battery:

 If you are the customer, please refer to the following method:

(1) Remove the Easy Release Adhesive protective film from the new battery.

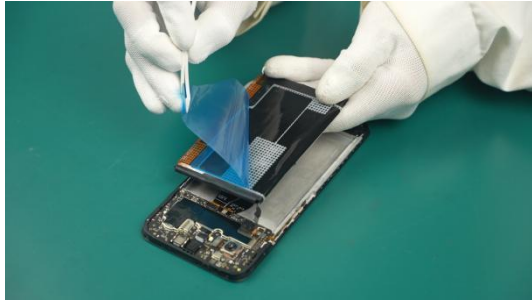

 Please try not to touch the surface of the Easy Release Adhesive to avoid contamination of the Easy Release Adhesive and affecting the adhesion effect.

(2) Align the battery with the correct position of the device, install and press to ensure it fits in place.



(3) Connect the Battery to the Mainboard Assy.




Disassembly and Assembly

 If you are a professional authorized repairer, please refer to the following method:

- (1) Align the positioning hole of the Easy Release Adhesive with the positioning column of the Battery adhesive applicator.



- (2) Tear off the protective film of the Easy Release Adhesive, and try to avoid touching the adhesive surface to prevent it from being contaminated and affecting the installation effect.

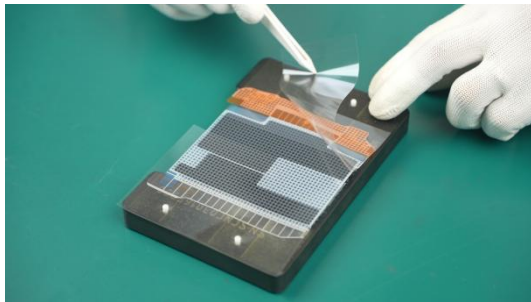

- (3) Align and attach the Battery.




Disassembly and Assembly


(4) Tear off the protective film on the other side of the Easy Release Adhesive.



(5) Tear off the protective film on the back of the Easy Release Adhesive.

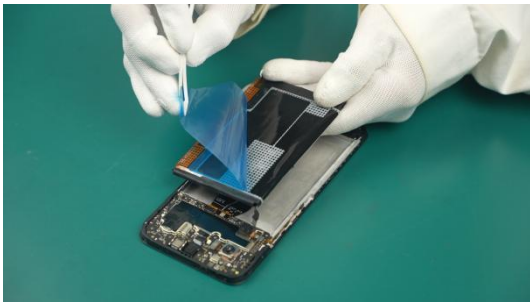

(6) Align the phone to the correct position, put the Battery in, and press lightly to ensure a firm fit.

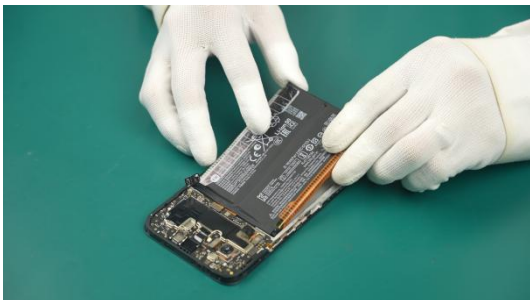



(7) Connect the Battery to the Mainboard Assy.



12. Assemble the Middle Frame Assy:

(1) Install the Fingerprint Module to the Middle Frame Assy.

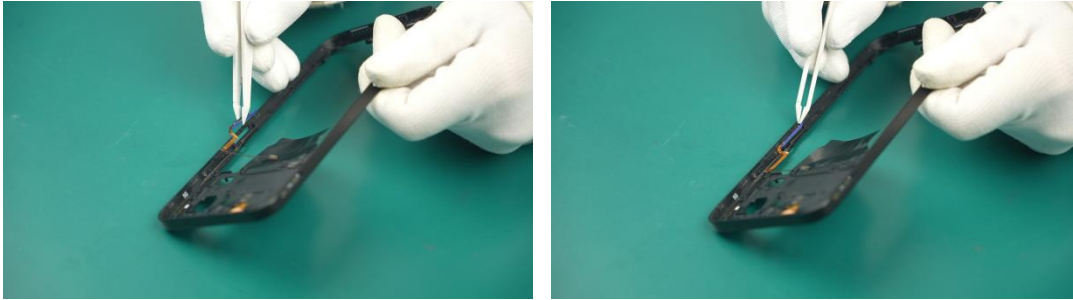



 Please do not use hard tools to install the Fingerprint Module to avoid scratching the device.

(2) Align the Middle Frame Assy with the device.



(3) Connect the cable of the Fingerprint Module to the Mainboard Assy.

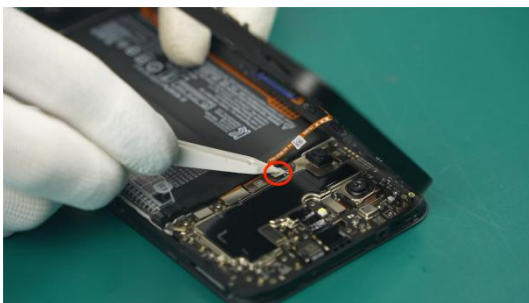


 Do not use metal tweezers or other hard tools as they may scratch the device.

Disassembly and Assembly


(4) Install the Middle Frame Assy and press it to ensure it is installed in place.




 Please make sure that all the clips are locked into place, otherwise it will affect the subsequent assembly.


(5) Tighten the screws on the Mainboard Assy.




 Please check the number of screws installed to ensure that no unassembled screws are left inside the device.

(6) Tighten the screws on the Sub-Board Assy.

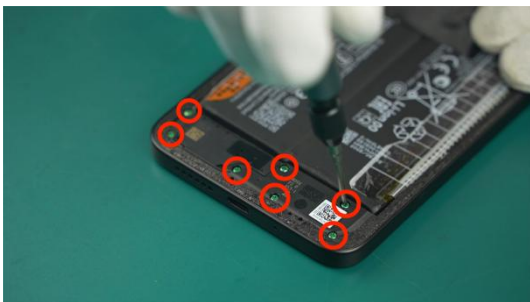


 Please check the number of screws installed to ensure that no unassembled screws are left inside the device.

13. Assemble the Battery Cover Assy:

 If you are the customer, please refer to the following method:


(1) Remove the remaining Battery Cover Adhesive on the Battery Cover Assy.




 You can use special alcohol to assist operation.

(2) Tear off the new Adhesive-Battery Cover protective film, and carefully align it with the Battery Cover.



 Please try not to touch the surface of the Adhesive-Battery cover to avoid contamination of the Adhesive-Battery cover and affect the adhesion effect.

 When assembling, tear off half of the protective film first, hold the part that has not been torn off from the protective film, align it with the device, fit it in place, then tear off the protective film completely.


Disassembly and Assembly

(3) Press to ensure that the Adhesive-Battery Cover and Battery Cover fit accurately.



(4) Tear off the protective film on the other side of the Adhesive-Battery Cover, install the Battery Cover, and press to ensure a firm fit.



 Before attaching the new Adhesive-Battery Cover, please clean the remaining Adhesive-Battery Cover.


Disassembly and Assembly

 If you are a professional authorized repairer, please refer to the following method:

- (1) Put the Battery Cover Adhesive into the Adhesive backing fixing tool, and align it with the positioning hole.



- (2) Tear off the protective film of the Battery Cover Adhesive, and do not touch the adhesive surface.

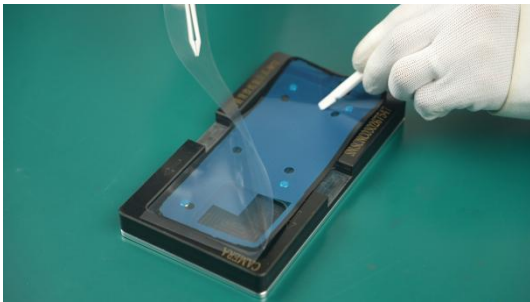

- (3) Put the Battery Cover Assy into the Adhesive backing fixing tool, and press gently to make the Battery Cover Adhesive and the Battery Cover Assy fit together.



Disassembly and Assembly


(4) Tear off the protective film on the other side of the Battery Cover Adhesive.



(5) Align the Battery Cover Assy with the device, and press gently to install it in place.




14. Assemble the SIM Card Tray:

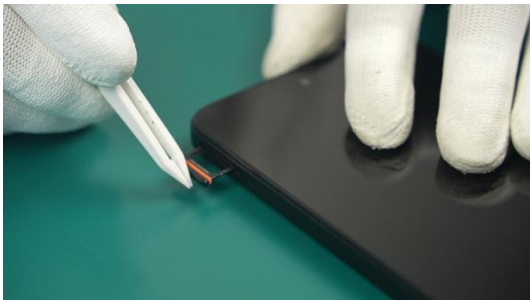


 Please do not use hard tools to install the SIM card tray to avoid scratching the device.

15. Crimp Mobile Phone:

-  If you are the customer, please press gently on a flat surface to ensure that the Battery Cover fits securely.




-  If you are a professional authorized repairer, place the phone into the Battery cover assembly press device and press for 60 seconds using the Crimping tool.

- (1) Place the phone into the Battery cover assembly press device.





- (2) Press for 60 seconds using the Crimping tool.

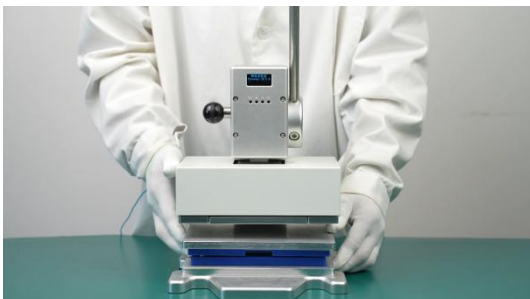

16. Test Phone Functions:

Test whether the phone's Wi-Fi, Bluetooth, sound, camera and other functions can be used normally.

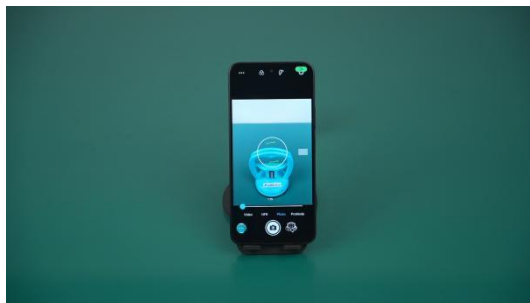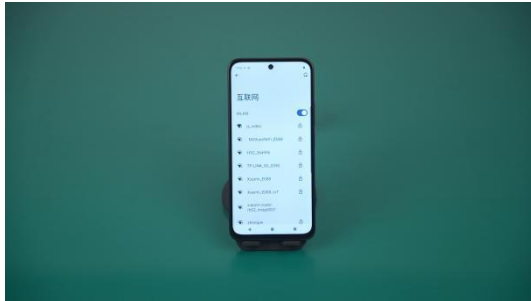

Calibration and Quality Inspection

To ensure proper assembly, it is recommended to calibrate and inspect the device after assembly. If any fault occurs during repair/assembly, calibration and inspection can help locate and identify the problem quickly. Please go to a Xiaomi Authorized Service Center for further assistance. Any fault caused by repair may incur additional repair costs.

Calibration

Please refer to the link for specific calibration methods.

https://cdn.shopify.com/s/files/1/0955/8360/0979/files/Mobile_phone_basic_function_test.pdf?v=1747878433

Quality Inspection

Please refer to the link for specific inspection methods.

链接待提供

The image shows the Xiaomi logo, which consists of the word "xiaomi" in a bold, orange, lowercase sans-serif font.

This manual is owned by Beijing Xiaomi Technology Co., Ltd.

Any unauthorized use of this guide may be punished according to applicable international/domestic laws.