

Repair Manual

Table of Contents

Instructions for Use

- 4 ----- Notes
- 5 ----- Repair Precautions
- 7 ----- ESD (Electrostatic Discharge) Precautions
- 7 ----- OTA Upgrade
- 8 ----- Icon Description

Materials and List

- 9 ----- Material
- 10 ----- List

Tool Preparation

- 11 ----- Tools
- 16 ----- Consumables (adhesives and other materials)

Disassembly

17 -----	Remove the SIM Card Tray
18 -----	Heating up the Phone
21 -----	Remove the Battery Cover Assy
23 -----	Remove the Screws
24 -----	Remove the Middle Frame Assy
26 -----	Remove the Camera Module
28 -----	Remove the Main Board Assy
30 -----	Remove the Coaxial Cable
32 -----	Remove the USB Board Assy
34 -----	Remove the Battery
35 -----	Remove the TP Module

Assembly

37 -----	Assemble the TP Module
40 -----	Assemble the USB Board Assy
43 -----	Assemble the Main Board Assy
45 -----	Assemble the Camera Module
47 -----	Assemble the Battery
50 -----	Assemble the Middle Frame Assy
52 -----	Assemble the Battery Cover Assy
54 -----	Assemble the SIM Card Tray
55 -----	Test Phone Functions

Calibration and Quality Inspection

56 -----	Calibration
56 -----	Quality Inspection

Notes

All functions, features, specifications and other device information provided in this document, including but not limited to the device's advantages, design, price, components, performance, availability and functionality, are subject to subsequent changes without further notice. Xiaomi reserves the right to modify this document or the device described herein at any time without obligation to provide notice of such changes.

Repair Precautions

Xiaomi is not responsible for any damage or defects caused by repairs by unauthorized service providers, self-repairs, or repairs by non-professionals. Xiaomi is not responsible for damage to the device, personal injury, or other device safety issues caused by attempts to repair the device without following these repair and maintenance instructions.

Damage or defects caused by attempts to repair the device by anyone other than a Xiaomi-certified service provider are not covered by the warranty.

- Because most electronic components are sensitive to electromagnetic forces, use a demagnetizing tool designed for minor electronic repairs.
- When repairing the device, use a high-quality screwdriver. Avoid damaging the screw heads with inferior screwdrivers.
- Always use OEM (Original Equipment Manufacturer) replacement parts. Using third-party replacement parts may not work properly and may cause fire or personal injury.
- Certain parts, such as sensors (laser autofocus/proximity/fingerprint sensors), rear cameras, TSP (touch Screen), speakers, and other components, may require calibration to guarantee their performance after repair.
- If your device is waterproof and dustproof, its waterproof and dustproof performance is not guaranteed if it is repaired by you or other non-professional workers.
- If you need to access the device's fault data or require a more detailed diagnosis, please visit a Xiaomi Service Center.
- If you need to replace an unsold part, please visit the Xiaomi Service Center and get further guidance.
- Before repairing, be sure to back up all important data stored in the device to avoid data loss.

Instructions for Use

Before performing repairs, always wear appropriate safety equipment.

Xiaomi is not responsible for any injuries that may occur as a result of not wearing appropriate safety equipment. Please read the Disassembly and Assembly Tools carefully for a list of tools required to assemble and disassemble the device.

- Always repair the device in a safe place.
- Before repairing the device, make sure the device is turned off.
- If the device is damaged, smokes, or smells burnt, stop using the device immediately and contact Xiaomi.
- It is recommended to wear safety equipment such as glasses, gloves, and masks when repairing the device.
- When removing the back cover, be careful not to damage the device.
- Before assembly, make sure there are no screws or foreign objects around the battery.
- During assembly, check for any abnormalities before reinstalling the back cover, and be careful not to hit or damage the battery. If the battery is damaged, please go to a Xiaomi Service Center.
- Do not heat the device directly in a microwave.
- Before repairing the device, make sure the battery is fully discharged.
- You can visit (<https://spare-parts.mi.com/>) to view device information, related materials and safety information.

ESD (Electrostatic Discharge) Precautions

Electrostatic discharge is the sudden flow of electricity between two charged objects due to contact, short circuit, or dielectric breakdown. ESD can negatively affect mobile devices, especially electronic components.

- It is recommended to use ESD-safe (antistatic) equipment, such as antistatic wrist straps and gloves, and ESD-safe mats when repairing devices.
- Increase airflow in the work area to reduce the possibility of accidental electrostatic discharge, which may increase in low humidity environments (such as air-conditioned rooms).

OTA Upgrade


You can check system updates by clicking on the system version number in the phone settings. If the system needs to be upgraded, you can click on the details to view the update log to understand the details of the upgrade and decide whether to update the system version based on your actual situation.

Icon Description

-  **Warning:** Situations that could cause harm to yourself or others;
-  **Caution:** Situations that may cause damage to your device or other equipment;
-  **Tip:** Notes, usage tips, or other information;
-  **Customers:** If you are the customer, please refer to the precautions/operations under this icon;
-  **Professional authorized repairer:** If you are the professional authorized repairer, please refer to the precautions/operations under this icon.

Materials and List

Materials

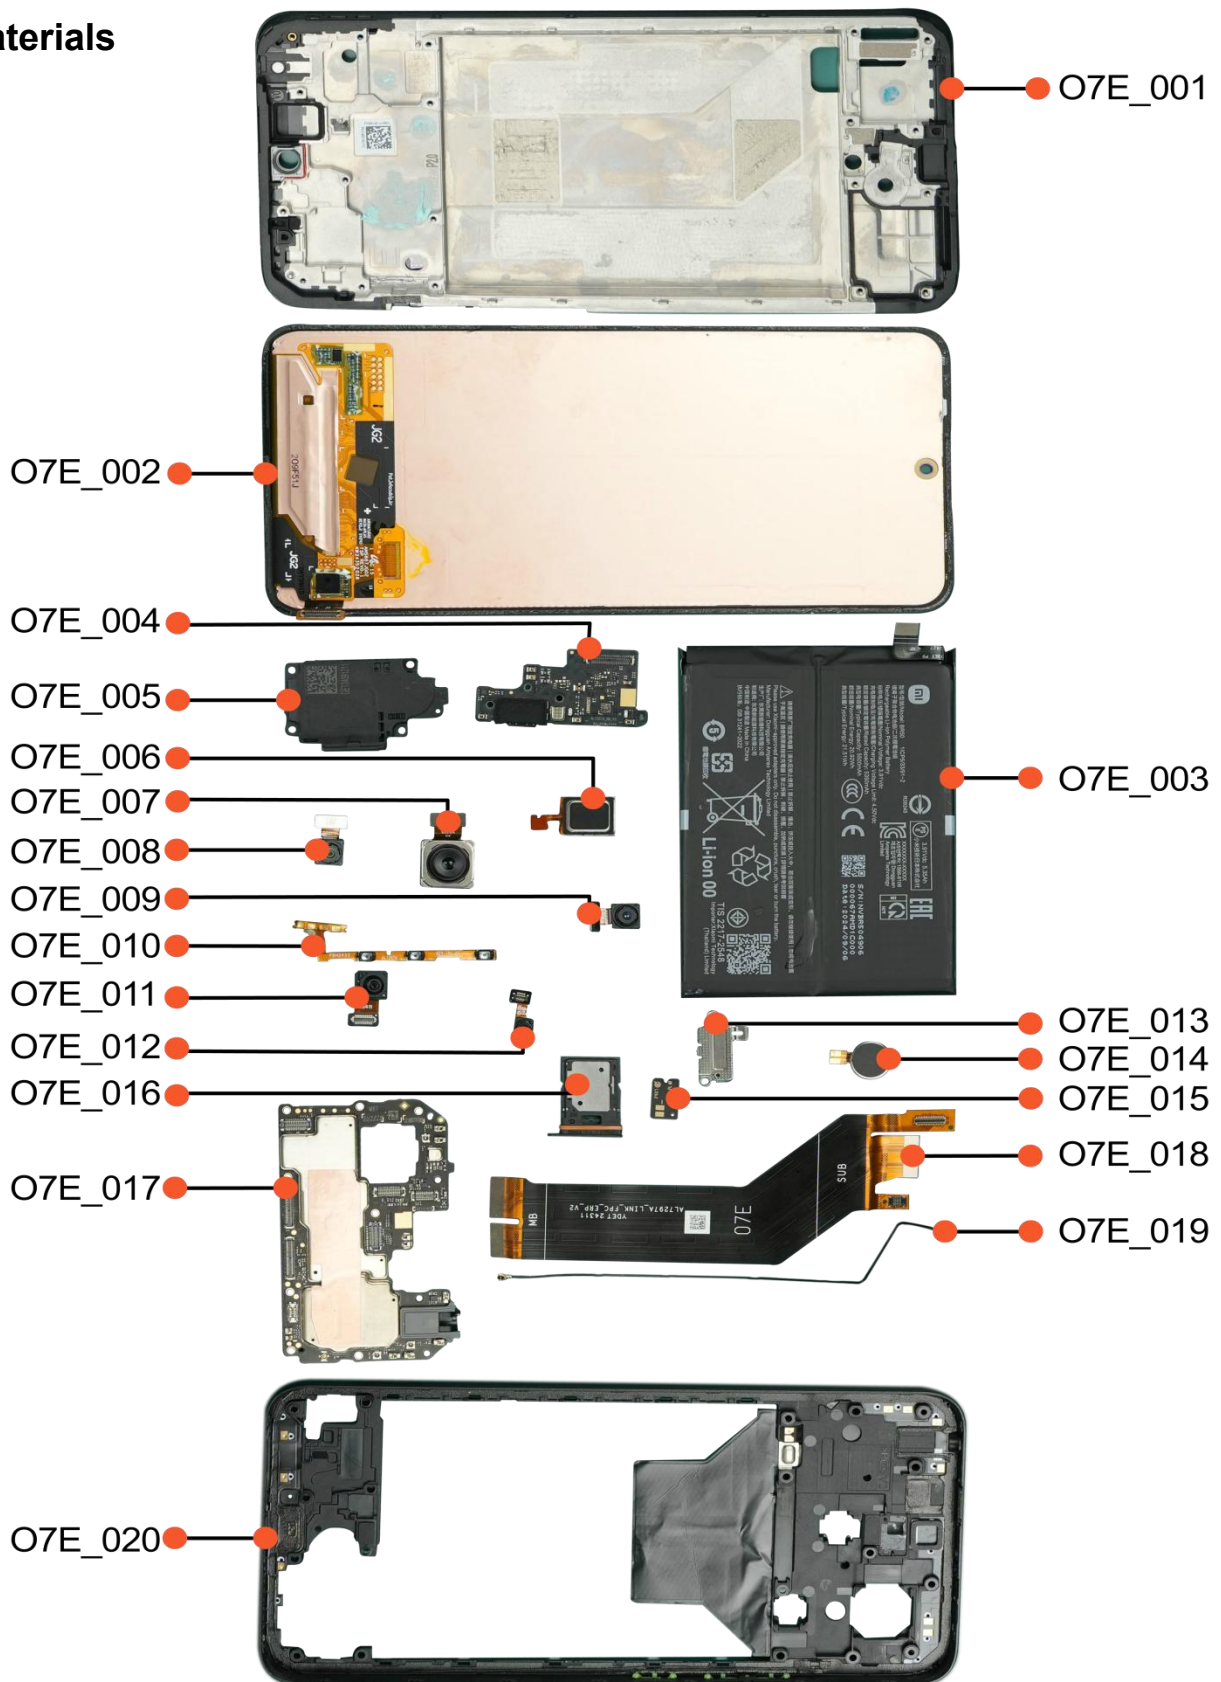

List

Serial number	Name
O7E_001	Middle Frame Assy
O7E_002	TP Module
O7E_003	Battery
O7E_004	USB board assy
O7E_005	Speaker assembly
O7E_006	Receiver
O7E_007	Main camera
O7E_008	Macro camera
O7E_009	Depth camera
O7E_010	FPC Assy-Side key
O7E_011	Front camera
O7E_012	Fingerprint module
O7E_013	Screen FPC Cover
O7E_014	Motor
O7E_015	LED Board Assy
O7E_016	SIM Card Tray
O7E_017	Main Board Assy
O7E_018	FPC cable
O7E_019	Coaxial Cable

Tools and Materials

Tools

 When disassembling and assembling the phone, please be sure to wear protective equipment to prevent injury.

Tool Name	Diagram	Details	Target users
Safety Goggles		Prevent accidents during repair (protective equipment).	 
Safety Gloves (ESD safe, cut-resistant)		Prevent accidents during repair (protective equipment).	 
Safety Mask		Prevent accidents during repair (protective equipment).	 
Anti-static Wrist Strap		Prevent static electricity from damaging the device (recommended).	 



Tool Preparation

Tool Name	Diagram	Details	Target users
ESD Safe Mat		Prevent static electricity from damaging the device (recommended).	 
Ejection Pin		Used to remove the SIM card tray (necessary tool).	 
Phillips Screwdriver		Used to remove screws (necessary tool).	 
Plastic Pry Bar		For removing wiring harness connections and other components (necessary tool).	 
Suction Cup		Used for disassembling and assembling the back cover and screen (necessary tool);  If your display is cracked, the suction cup may not stick properly and be careful not to get cut by the broken pieces.	 

Tool Preparation

Tool Name	Diagram	Details	Target users
ESD Safe Tweezers		Used for disassembly and assembly of small parts (necessary tool);  Please do not use metal tweezers to avoid scratching the device and damaging it with static electricity.	 
Plastic Pry Tool		Used to remove the battery cover and other parts (necessary tool);  Other sturdy sheets can be used instead (plastic sheets);  Please do not use metal sheets or blades to avoid damaging the device.	 

Tool Preparation

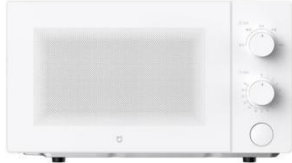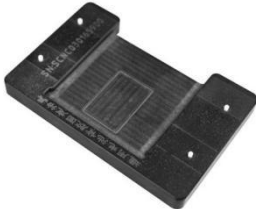
Tool Name	Diagram	Details	Target users
Heating Bag		Used to heat when removing the back cover (necessary tool);  Use the tabs as handles when heating to avoid burns.	
Micro-wave Oven		For heating the Heating Bag (necessary tool).	
Adhesive Backing Fixing Tool		Used to position the adhesive when sticking the battery cover.	
Battery Adhesive Applicator		Used to position the battery glue when sticking it.	
Battery Cover Assembly Press Device		Used when pressing the battery cover to evenly distribute the pressure on the battery cover.	

Tool Preparation

Tool Name	Diagram	Details	Target users
Heating Platform		When removing the battery cover, heat the adhesive on the battery cover to make it easier to separate the battery cover from the device.	
Crimping Tool		Used when pressing the battery cover, so that the pressure can be precisely controlled.	
Air Tightness Tester		Used to detect the air tightness of mobile phones;  If the phone is dustproof and waterproof, the air tightness of the phone needs to be tested after assembly.	

Consumables (adhesives and other materials)

-  Consumables may vary depending on the repair parts, country, region or repair provider.
The content in the table is for reference only.

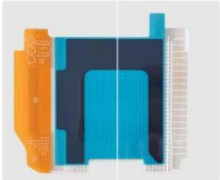Name	Diagram	Details	Target users
Battery Cover Adhesive		Used when attaching the battery cover to the device.	 
Easy Release Adhesive-Battery		Used when attaching the battery to the device.	 
Front Cover Display Module		Used when replacing the screen.	 


Disassembly

Before disassembly

- Make sure your phone data is backed up to prevent loss of important data.
- Disconnect the device from the power source and turn it off.
- Wear an anti-static wrist strap and connect it to a grounded ESD safety mat.
- The composition of the product may vary by country, region, or repairer.

1. Remove the SIM Card Tray:

Insert the ejection pin into the hole of the SIM card tray to loosen the tray and pull out the tray gently from the slot.

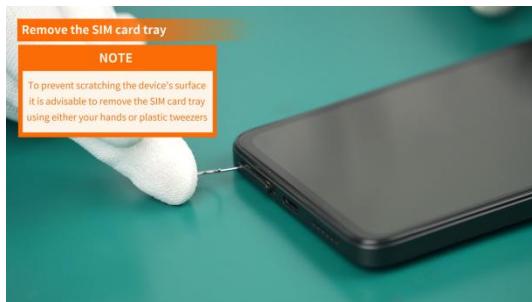

 To prevent scratching the device's surface, it is advisable to remove the SIM card tray using either your hands or plastic tweezers.

 For the assembly method of the SIM Card Tray, please refer to the subsequent assembly tutorial in the manual.

2. Heating up the Phone:

 If you are the customer, please refer to the following method:

-  • It is possible for the device or battery to be damaged by heat.
 - Do not heat the device in a microwave. Doing so could cause an explosion.
-  • Follow the heating bag's instructions for heating. The recommended time for heating the bag is 50 seconds in a 1000W microwave and 70 seconds in a 700W microwave. (Correct temperature for use: 55-65 °C.)
 - Be careful not to damage the device through excessive heat. (It is recommended to disassemble the device in an area with a temperature gauge.)

(1) Heat the Heating Bag in the microwave for 2-5 minutes until it reaches about 70 degrees Celsius.



 The heating time needs to be adjusted according to the power of your microwave.

Disassembly and Assembly

(2) Take the Heating Bag out of the microwave.



 Use the label as a handle when removing the Heating Bag to avoid burns.

(3) Place the phone on the Heating Bag and heat it for about 1-2 minutes.



Disassembly and Assembly

 If you are a professional authorized repairer, please refer to the following method:

(1) Use a heating platform and wait for it to heat up to about 70 degrees Celsius.




(2) Place the phone on the heating platform and continue heating for 1-2 minutes.



 Please heat the device within the specified temperature and time, otherwise it may be damaged or affect subsequent operations.

3. Remove the Battery Cover Assy:

(1) Use a Suction Cup and Plastic Pry Tool to gently cut the adhesive on the Battery Cover.


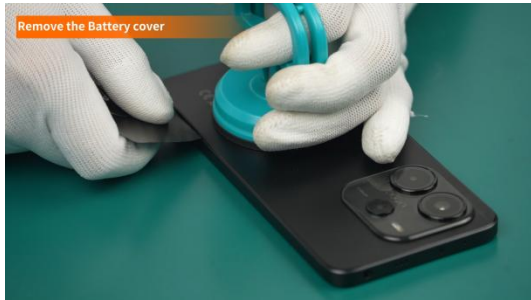


💡 Use the Plastic Pry Tool to slide along the left edge of the device to cut the glue, leaving the Plastic Pry Tool on the left edge side when finished to prevent the adhesive from resealing.

- 📄 • As the Battery Cover Assy may be damaged by excessive force, be careful not to damage the Battery Cover Assy.
- Do not insert the Plastic Pry Tool too deeply into the device as the internal circuitry may be damaged.

Disassembly and Assembly



- (2) Use the Suction Cup and Plastic Pry Tool, as described above, cut away all the glue around the Battery Cover assembly, then carefully separate the Battery Cover assembly from the device.

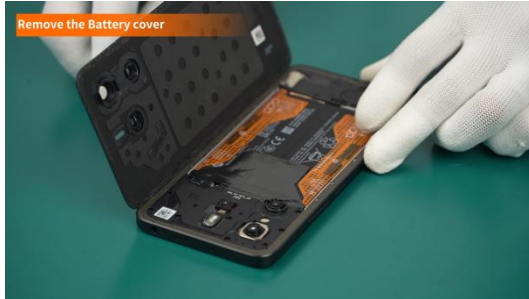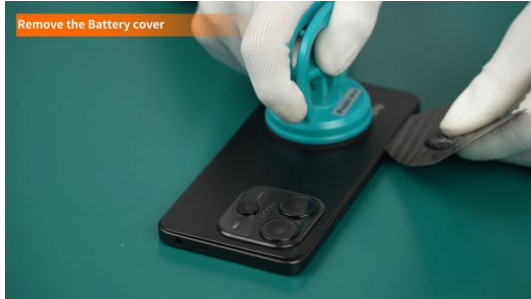

-  • Be careful not to damage the Battery Cover Assy, as excessive force may damage the Battery Cover Assy.
- Do not insert the Plastic Pry Tool too far into the device, as it may damage the internal circuitry.
-  If it's difficult to create a gap, reheat to further soften the adhesive. When reheating, do not reheat for more than 30 seconds.
-  Anti-shattering of glass/ceramic back cover:
 - Avoid pressing hard on the center of the back cover when separating (especially for curved TP Module models) to prevent glass cracking due to stress concentration.
 - If the back cover is broken, fix the fragments with tape before operation to avoid scratching your fingers or dropping them into the device.


4. Remove the Screws:

(1) Use a needle screwdriver to remove the screws at the top and bottom.

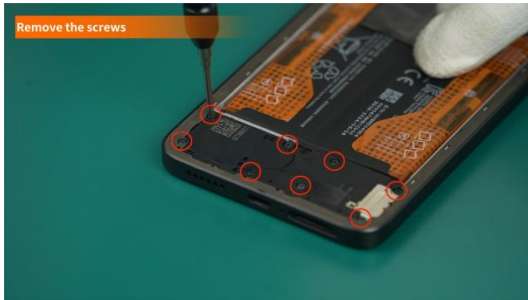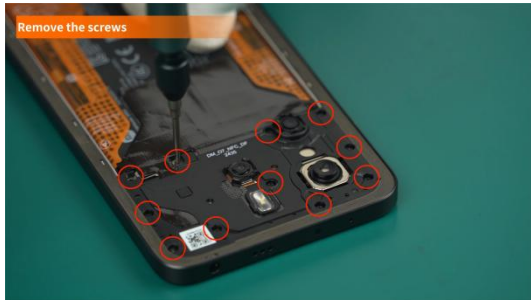

 Check the number of screws that have been removed and keep them in a safe place to ensure that no unassembled screws are left inside the device during the assembly process.

(2) Use tweezers to carefully remove the Screen FPC Cover.

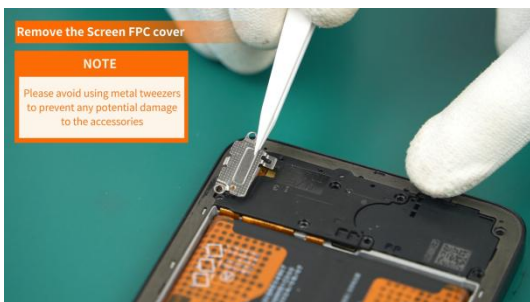

 Do not use metal tweezers as they may scratch or damage the accessories.

5. Remove the Middle Frame Assy:

(1) Use the Plastic pry tool to separate the Middle Frame Assy clips from the device.




(2) Carefully remove the Middle Frame Assy from the phone.




 When operating near the power button, be careful to avoid accidental touch or damage.

(3) Use tweezers to remove the LED Board Assy from the Middle Frame Assy.

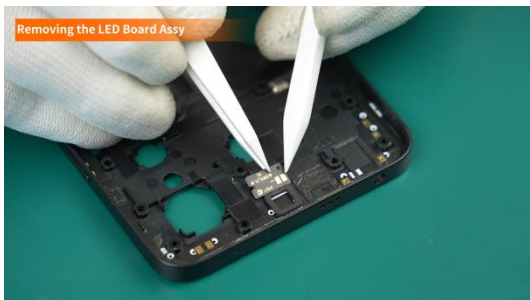

Disassembly and Assembly

(4) Use tweezers to disconnect the battery cable and FPC cables in turn.

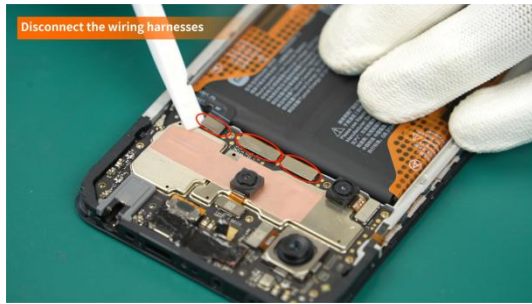

- For your safety, always disconnect the battery connector first.
- Be careful not to damage the battery.



6. Remove the Camera Module:

(1) Use tweezers to remove the Blackout tape.




 Please remove the tape gently along the direction of the tape and avoid excessive force to ensure that the tape maintains its integrity during subsequent assembly.

(2) Disconnect and remove the Depth camera.

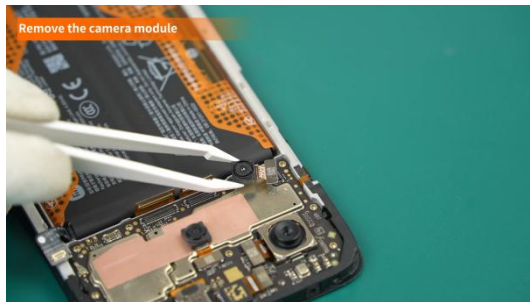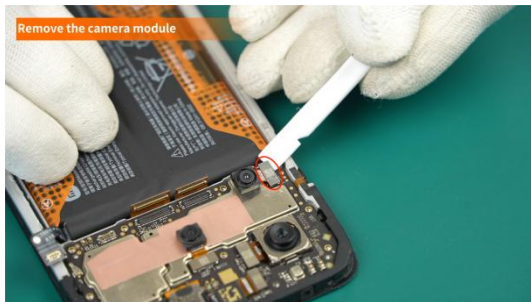

 Do not touch the camera lens directly during operation to avoid scratching the lens.

(3) Disconnect and remove the Main camera.

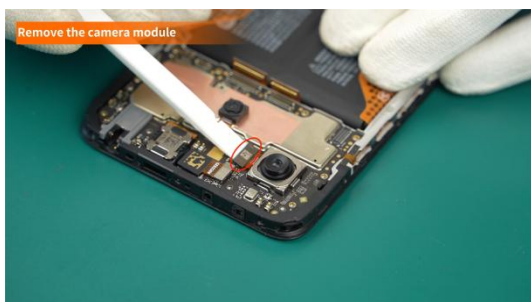

 Do not touch the camera lens directly during operation to avoid scratching the lens.



Disassembly and Assembly

(4) Disconnect and remove the Macro camera.



 Do not touch the camera lens directly during operation to avoid scratching the lens.


(5) Disconnect and remove the Front camera.

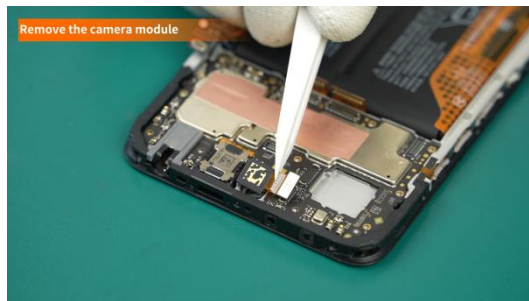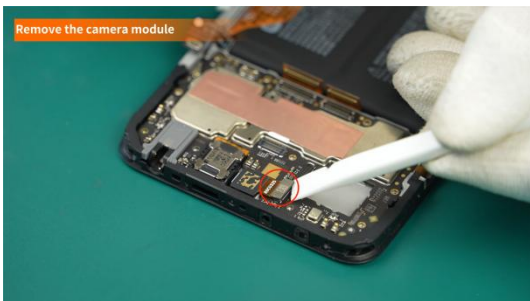

-  • Do not touch the camera lens directly during operation to avoid scratching the lens.
- The camera lens and sensor are very precise. Finger grease or dust will affect the image quality. Wear gloves or hold with a dust-free cloth when operating.
 - If you need to clean the lens, use special lens paper or cotton swab dipped in a small amount of anhydrous alcohol to gently wipe it. Do not use paper towels or hard objects to scratch it.
 - The camera is usually connected to the motherboard via an FPC cable. You need to disconnect the cable interface before disassembly.
 - Use tweezers to gently lift the pressure plate before pulling out the cable. Do not pull the cable directly.
 - If the cable is stuck to the Mainboard Assy, use a Plastic Pry Bar to gently lift it up to avoid breaking the cable.

7. Remove the Main Board Assy:

- (1) Use tweezers to disconnect the Coaxial Cable, and remove the Main Board Assy from the device.

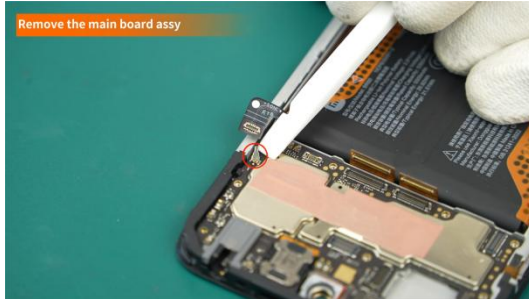

-  Carefully lift the Mainboard Assy with tweezers and remove the Mainboard Assy, being careful not to damage the PBA board.
- Do not touch the Mainboard Assy directly with metal tools to avoid scratching the Mainboard Assy and static damage.
 - Use moderate force when holding components with tweezers to avoid squeezing small components such as capacitors and resistors.
-  For Mainboard Assy assembly methods, please refer to the subsequent assembly tutorials in the manual.

- (2) Use tweezers to remove the Receiver.



Disassembly and Assembly



(3) Use tweezers to remove the FPC Assy-Side key.



-  Do not use metal tweezers or other hard tools as they may scratch the device.
-  Use ESD Safe Tweezers to cut the adhesive between the FPC Assy-Side key and the device. Use ESD Safe Tweezers to press one side of the FPC Assy-Side key in the slot to lift up the other side of the FPC Assy-Side key. Then use ESD Safe Tweezers to remove the FPC Assy-Side key.


8. Remove the Coaxial Cable:

- (1) Use tweezers to disconnect the TP Module from the FPC cable.

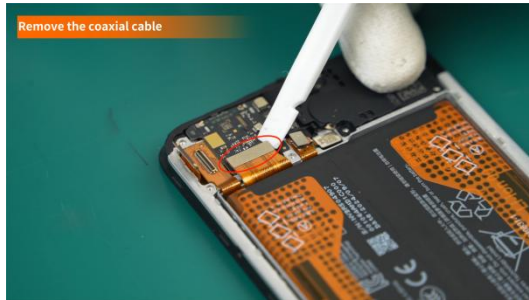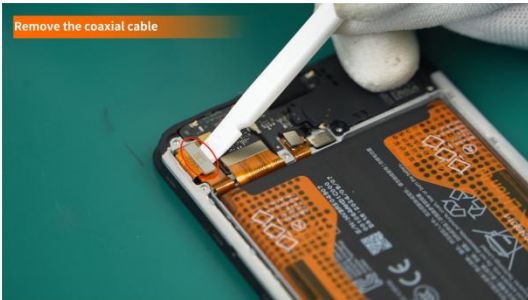


 Do not use metal tools during operation to avoid scratching the equipment.

- (2) Disconnect the FPC cable from the USB board assy.

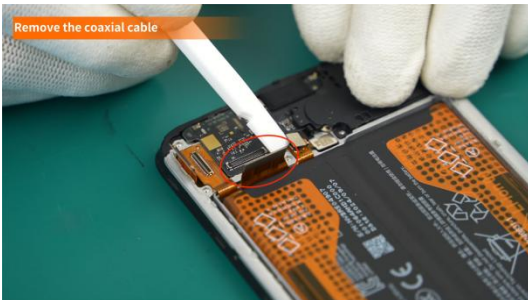

 Do not use metal tools during operation to avoid scratching the equipment.


- (3) Disconnect the Fingerprint module.

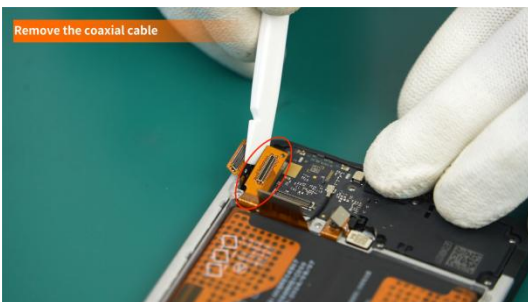


 Be careful not to damage other components during operation.

Disassembly and Assembly

(4) Disconnect the Coaxial Cable from the USB board assy.

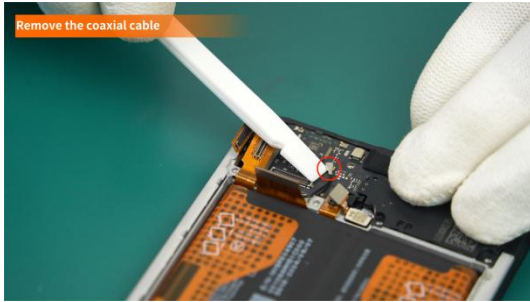


(5) Remove the Coaxial Cable from the device.

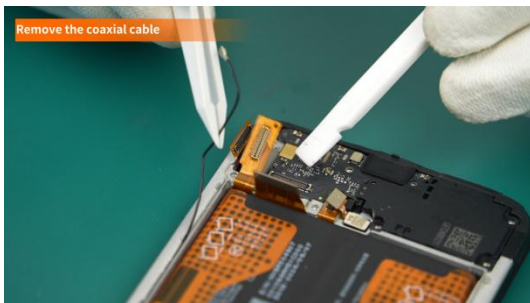

-  • Be careful not to damage the wiring harness interface and surrounding components during operation.
- Do not pull the cable directly when disconnecting to avoid breaking it.
-  • You can use the flat side of a Plastic pry bar to gently pry up the connector.
- Please tidy up the wiring harness after disconnecting to avoid affecting subsequent operations.


9. Remove the USB Board Assy:

(1) Use tweezers to remove the Speaker assembly.

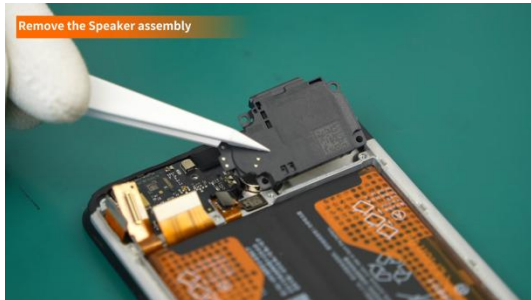


 Do not use metal tweezers or other hard tools as they may scratch the device.

(2) Remove the Fingerprint module.

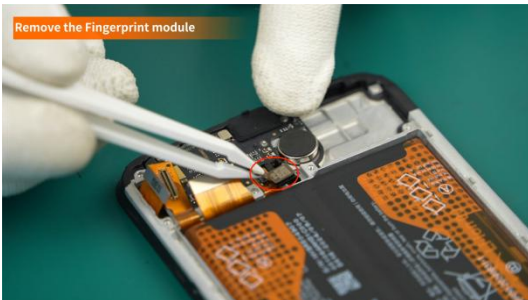

 Do not use metal tweezers or other hard tools as they may scratch the device.

(3) Remove the USB board assy from the device.

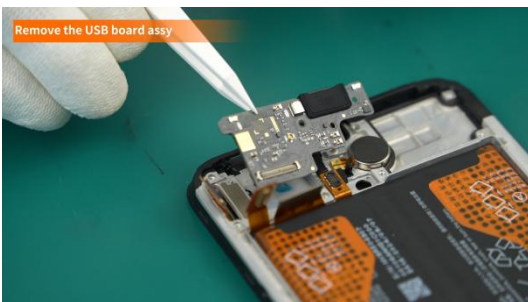

Disassembly and Assembly

(4) Remove the Motor.




 When clamping components, use appropriate force to avoid damage to the components due to excessive force.

10. Remove the Battery:

(1) Peel off the battery peel-off sticker.



(2) Remove the battery and remove the Easy release adhesive remaining on the device.

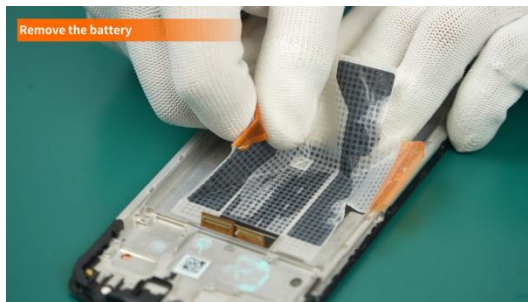

 Be careful not to damage the battery.

 You can use special alcohol to help remove the adhesive, or use the microwave to heat the heating bags, then heat the device before removing it.

(3) Remove the FPC cable.



 You can use special alcohol to help remove the adhesive, or use the microwave to heat the heating bags, then heat the device before removing it.

11. Remove the TP Module:


- ⚠ • It is possible for the device or battery to be damaged by heat.
 - Do not heat the device in a microwave. Doing so could cause an explosion.
- 📄 • Follow the heating bag's instructions for heating. The recommended time for heating the bag is 50 seconds in a 1000W microwave and 70 seconds in a 700W microwave. (Correct temperature for use: 55-65 °C.)
 - Be careful not to damage the device through excessive heat. (It is recommended to disassemble the device in an area with a temperature gauge.)

(1) Heat the Heating Bag in the microwave to about 70 degrees.



- 💡 The heating time needs to be adjusted according to the power of your microwave.

(2) Place the phone on the Heating Bag and heat it for about 1-2 minutes.

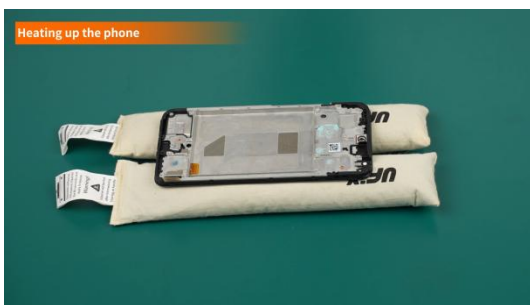

Disassembly and Assembly


(3) Use a Plastic pry tool to gently separate the TP Module from the device.



💡 Use the Plastic Pry Tool to slide along the left edge of the device to cut the glue, leaving the Plastic Pry Tool on the left edge side when finished to prevent the adhesive from resealing.

📘 As the TP Module may be damaged if subjected to excessive force, please handle with care to avoid damage.

(4) Remove the TP Module from the device.

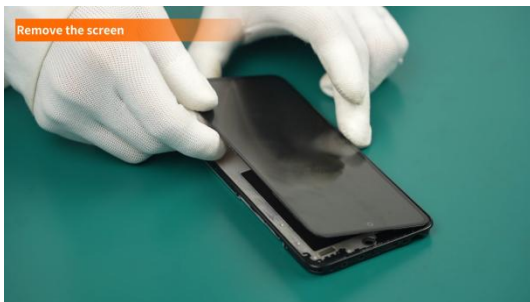

📘 As the TP Module may be damaged if subjected to excessive force, please handle with care to avoid damage.

Assembly

 Before reassembly, please confirm the following:

- Thoroughly remove any residual adhesive.
- Prepare the screws and new adhesive required for the device.
- Wear an anti-static wrist strap and connect it to a grounded ESD safe mat.
- Do not leave any unassembled screws inside the device. Leaving screws inside the device may damage internal components such as the battery. Please be extremely careful during assembly.
- The composition of the product may vary by country, region, or repairer.

1. Assemble the TP Module:

(1) Tear off the new TP Module fixed adhesive protective film, and press to ensure that the TP Module fixed adhesive fits the device accurately.



-  • Make sure to align with the device frame.
- When installing the TP Module fixed adhesive, please try not to touch the surface of the TP Module fixed adhesive to avoid contaminating the TP Module fixed adhesive and affecting the bonding effect.
 - Please clean the remaining TP Module fixed adhesive before attaching the new one.


Disassembly and Assembly

- (2) Use tweezers to tear off the other side of the TP Module fixed adhesive protective film.




When peeling off the other side of the TP Module fixed adhesive, please try not to touch the surface of the TP Module fixed adhesive to avoid contaminating the TP Module fixed adhesive and affecting the bonding effect.

- (3) Tear off the new TP Module protective film.

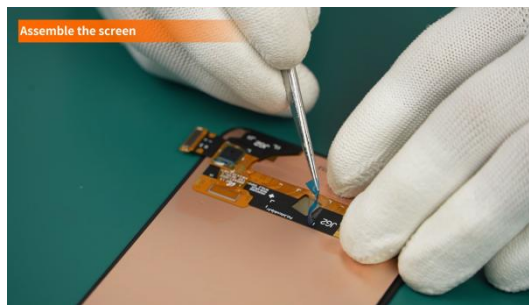

- (4) Align the TP Module cable with the corresponding hole of the device.

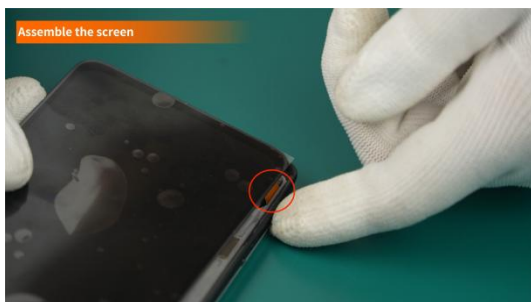

Disassembly and Assembly


(5) Press the TP Module against the device frame.



-  press the TP Module after fitting to ensure a firm fit.
- When closing the TP Module, apply force evenly to ensure that the screen fits tightly around the edges. Do not press or twist it.
- Try to operate in a windless and dust-free indoor environment.

2. Assemble the USB Board Assy:

- (1) Place the FPC cable in the correct position of the device and press to ensure it fits in place.

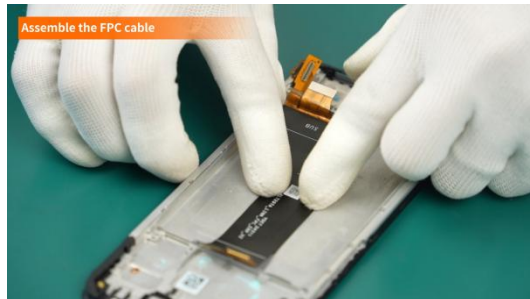

- Attach the Copper Foil flatly. You can press lightly with your fingers to ensure it fits securely.

- (2) Use tweezers to install the Motor in place.





- (3) Install the Fingerprint module and connect it to the FPC cable.




- Check whether the Fingerprint module is installed properly. If the Fingerprint module is not installed properly, it may affect subsequent installations.

Disassembly and Assembly

(4) Place the USB board assy into the device and press gently to ensure it is firmly seated.

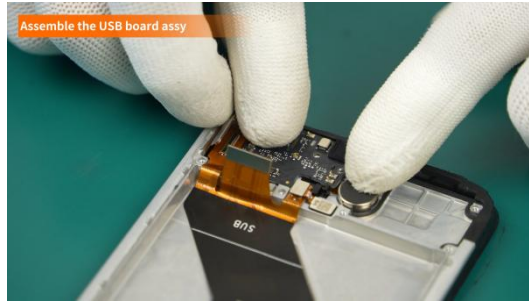
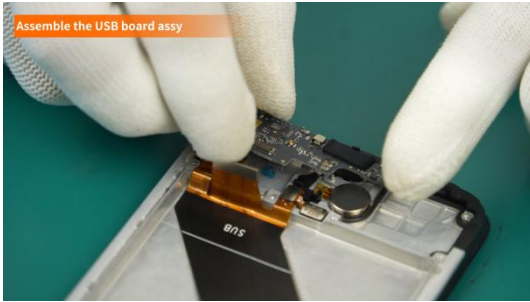


(5) Use tweezers to connect the Coaxial Cable to the USB board assy and organize the Coaxial Cable.

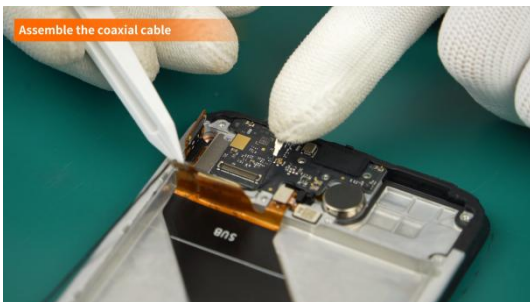

-  Be careful not to damage the wiring harness when arranging it.
-  You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.


(6) Connect the TP Module cable and FPC cable to the USB board assy.

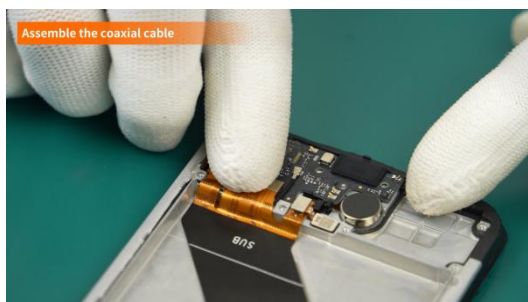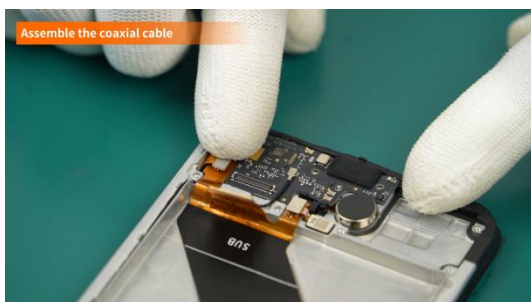

-  You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

Disassembly and Assembly

(7) Install the speaker assembly in the correct position of the device.

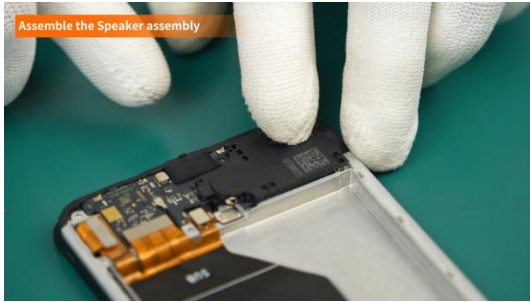

 Press lightly to ensure it is installed in place.


3. Assemble the Main Board Assy:

(1) Use tweezers to install the Receiver.





- Press lightly to ensure it is installed in place.
- Please do not use metal tweezers or other hard tools to avoid scratching the device.
- Please make sure that all the clips are locked into place, otherwise it will affect the subsequent assembly.

(2) Install the FPC Assy-Side key.

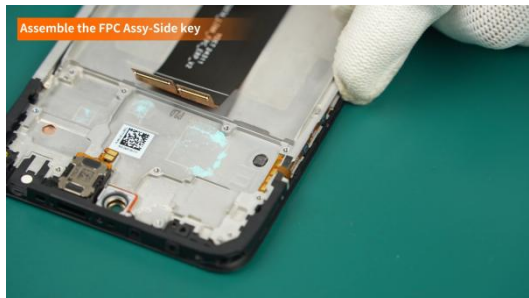



- Please press the FPC Assy-Side key lightly to ensure it is installed in place.
- Please do not use metal tweezers or other hard tools to avoid scratching the device.

(3) Put the Main Board Assy into the correct position of the device, and press lightly to ensure it is installed in place.

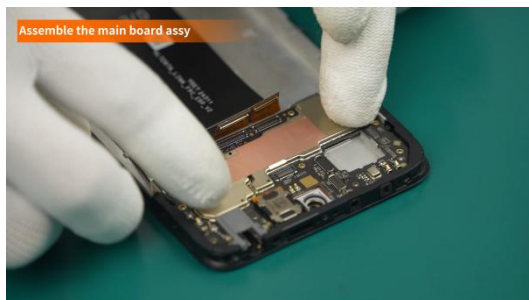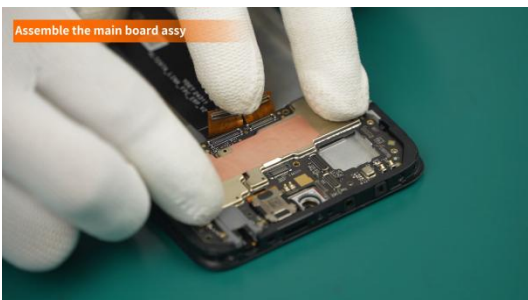

Disassembly and Assembly


(4) Connect the FPC cable and Coaxial Cable.

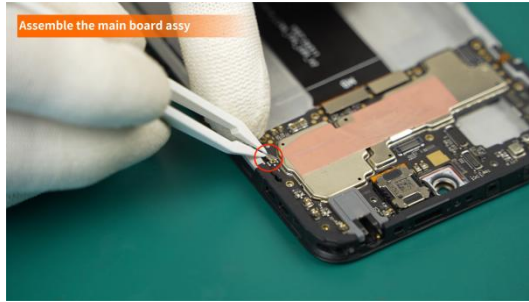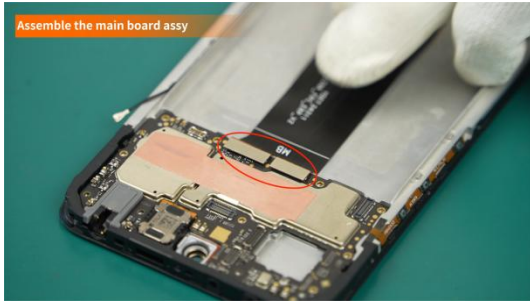


- You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.

4. Assemble the Camera Module:

(1) Install the Depth camera.

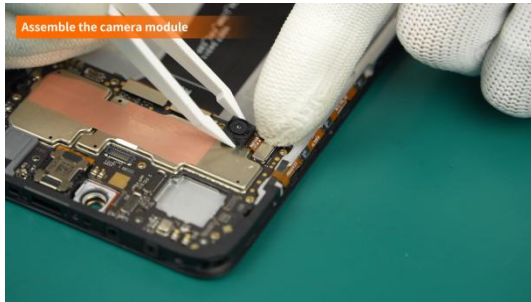

(2) Install the Macro camera.

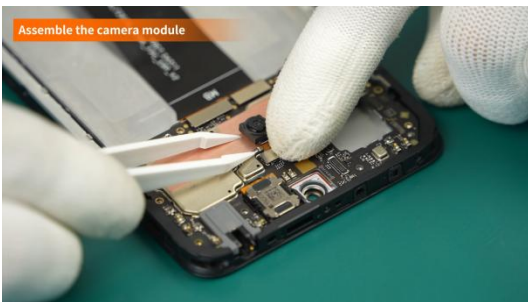

(3) Install the Main camera.





(4) Install the Front camera.



Disassembly and Assembly

(5) Put the Blackout tape back on.

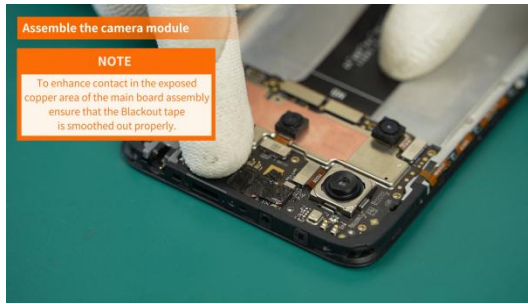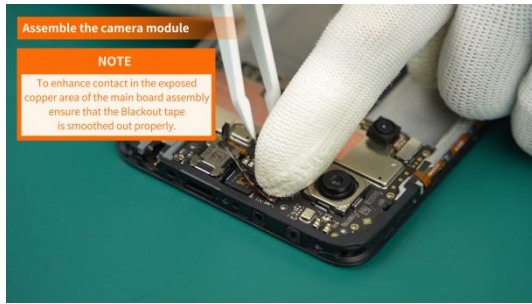


-  • Do not touch the camera lens directly during operation to avoid scratching the lens.
- Do not use hard tools during operation, as this may damage the Conductive Cloth or Graphite Sheet.
- To enhance contact in the exposed copper area of the main board assembly ensure that Blackout tape is smoothed out properly.
-  • You can press the wiring harness interface with your fingers. If you can clearly feel a "click" sound, it means the interface is connected in place.
- Attach the Copper Foil flatly. You can press lightly with your fingers to ensure it fits securely.

5. Assemble the Battery:


 If you are the customer, please refer to the following method:

(1) Remove the Easy Release Adhesive protective film from the new battery.

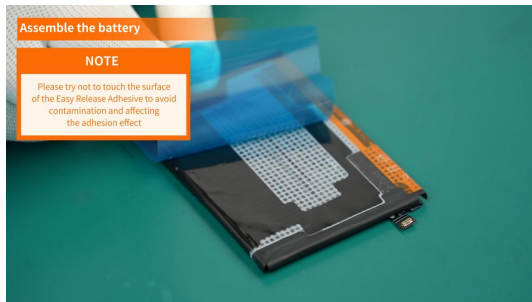

 Please try not to touch the surface of the Easy Release Adhesive to avoid contamination of the Easy Release Adhesive and affecting the adhesion effect.

(2) Align the battery with the correct position of the device, install and press to ensure it fits in place.

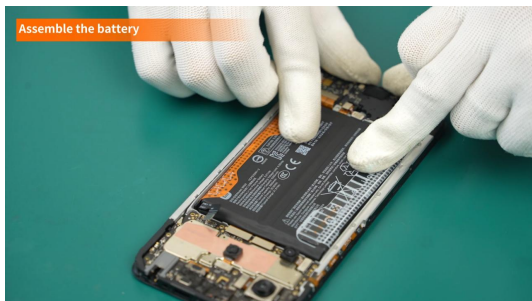

(3) Connect the Battery to the Mainboard Assy.




 If you are a professional authorized repairer, please refer to the following method:

- (1) Align the positioning hole of the Easy Release Adhesive with the positioning column of the Battery adhesive applicator.



- (2) Tear off the protective film, try to avoid touching the adhesive surface to prevent it from being contaminated and affecting the assembly effect, then align and attach the batteries.


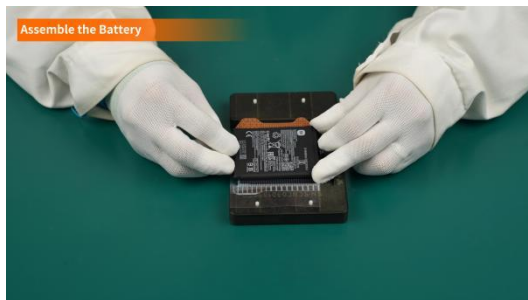


- (3) Tear off the protective film on the other side of the Easy Release Adhesive, and try to avoid touching the adhesive surface.



Disassembly and Assembly

- (4) Then tear off the protective film on the back of the Easy Release Adhesive, align the phone to the correct position, then put the Battery in.

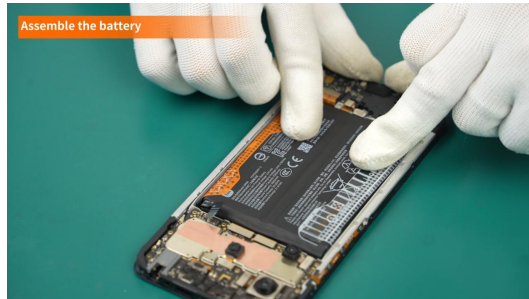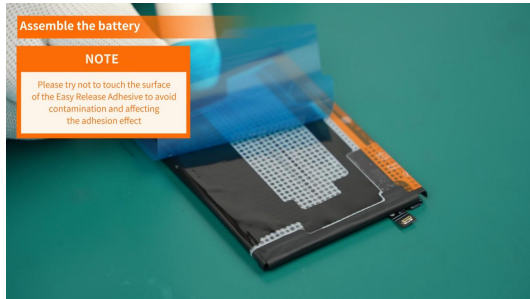


- (5) Connect the Battery to the Mainboard Assy.




6. Assemble the Middle Frame Assy:

(1) Use tweezers to install the LED Board Assy.

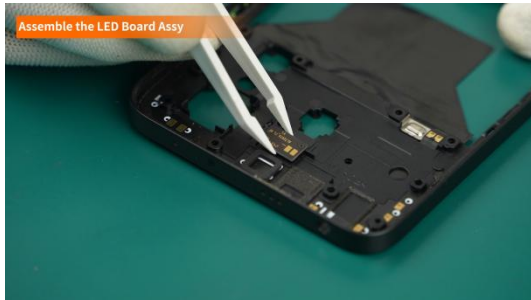


 • Please do not use metal tweezers or other hard tools to avoid scratching the device.

(2) Align the Middle Frame Assy with the device.

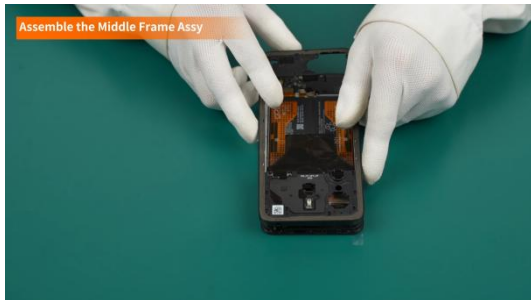



 Press to ensure that the Middle Frame Assy is installed in place.

(3) Install the Screen FPC cover, and then use a screwdriver to install the screws into place one by one.

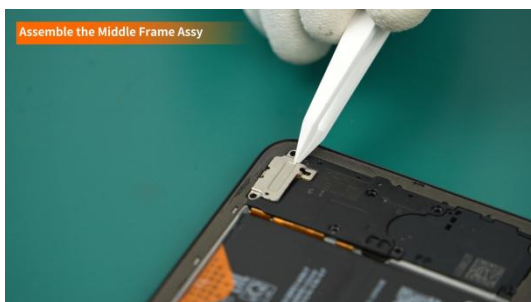

Disassembly and Assembly

(4) Use a screwdriver to install the screws into place one by one.

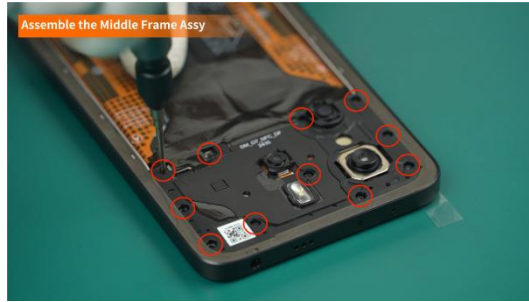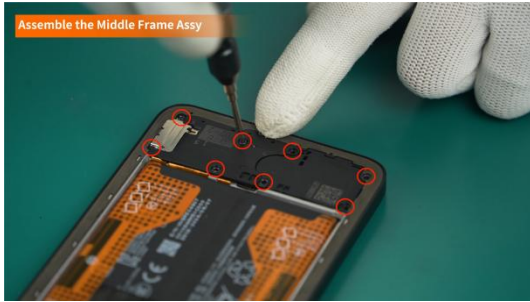

 Please check the number of screws installed to ensure that no unassembled screws are left inside the device.

7. Assemble the Battery Cover Assy:

 If you are the customer, please refer to the following method:

(1) Tear off the new Adhesive-Battery Cover protective film, and carefully align it with the Battery Cover.



 Please try not to touch the surface of the Adhesive-Battery cover to avoid contamination of the Adhesive-Battery cover and affect the adhesion effect.



 When assembling, tear off half of the protective film first, hold the part that has not been torn off from the protective film, align it with the device, fit it in place, then tear off the protective film completely.

(2) Press to ensure that the Adhesive-Battery Cover and Battery Cover fit accurately.



Disassembly and Assembly

- (3) Tear off the protective film on the other side of the Adhesive-Battery Cover, install the Battery Cover, and press to ensure a firm fit.

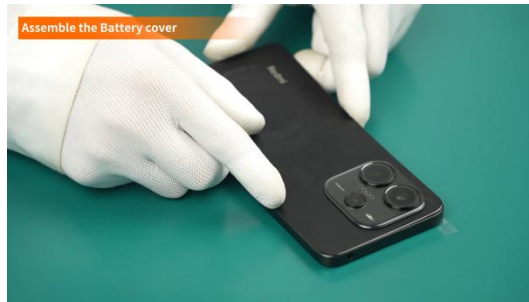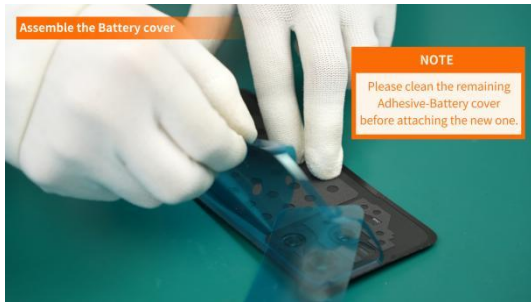


-  Before attaching the new Adhesive-Battery Cover, please clean the remaining Adhesive-Battery Cover.

-  If you are a professional authorized repairer, please refer to the following method:

- (1) Put the Battery Cover Adhesive into the Adhesive backing fixing tool, and align it with the positioning hole.



- (2) Tear off the protective film of the Battery Cover Adhesive, and do not touch the adhesive surface.

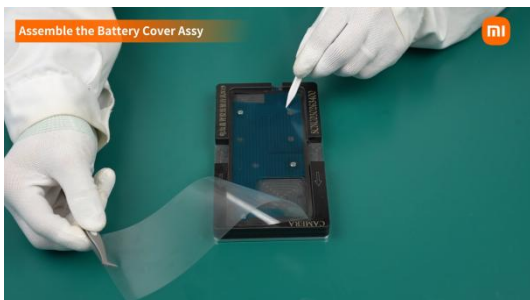


Disassembly and Assembly

- (3) Put the Battery Cover Assy into the Adhesive backing fixing tool, press gently to make the Battery Cover Adhesive and the Battery Cover Assy fit together.



- (4) Tear off the protective film on the other side of the Battery Cover Adhesive, align the Battery Cover Assy with the device, and press gently to install it in place.

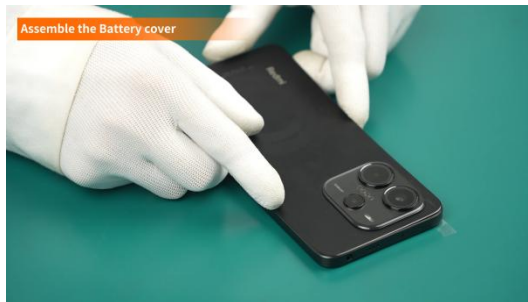

8. Assemble the SIM Card Tray:




Please do not use hard tools to install the SIM card tray to avoid scratching the device.

9.Test Phone Functions:

(1) Check whether the phone can be turned on normally.



(2) Test whether the phone's Wi-Fi, Bluetooth, sound, camera and other functions can be used normally.

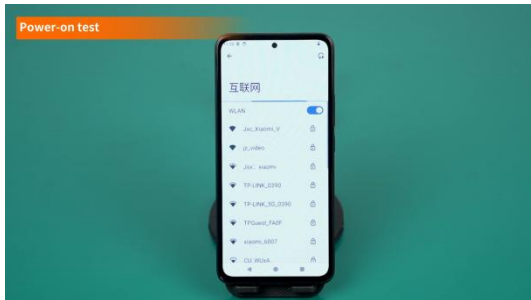

Calibration and Quality Inspection

To ensure proper assembly, it is recommended to calibrate and inspect the device after assembly. If any fault occurs during repair/assembly, calibration and inspection can help locate and identify the problem quickly. Please go to a Xiaomi Authorized Service Center for further assistance. Any fault caused by repair may incur additional repair costs.

Calibration

Please refer to the link for specific calibration methods.

https://cdn.shopify.com/s/files/1/0955/8360/0979/files/Mobile_phone_basic_function_test.pdf?v=1747878433

Quality Inspection

Please refer to the link for specific inspection methods.

链接待提供

xiaomi

This manual is owned by Beijing Xiaomi Technology Co., Ltd.

Any unauthorized use of this guide may be punished according to applicable international/domestic laws.